

Onan Generator Reset Procedure

Onan HGJAA and HGJAD Series 5500w Generator

To Reset Generator when code is set:

1. Turn off Breakers on Generator
2. On the Generator push STOP twice rapidly followed by one rapid push to START. Do not start the generator.
3. Hold down Stop/Prime and it should show a steady red light. If not repeat above.

If it has a steady red light on Stop/Prime then start the generator as usual. Once it stabilizes turn on the breakers.