

## DVD Home Theatre System

### Operating Instructions

### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc.

Do not place the naked flame sources such as lighted candles on the apparatus.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The main plug is used to disconnect this device from the AC outlet, so position this device in a location where it can be easily unplugged.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

 
The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions. Indoor use only.

### CAUTION

The use of optical instruments with this product will increase eye hazard.

### For European and Mexican models:



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior of unit.

### Notice for customers: The following information is only applicable to equipment sold in countries applying EU Directives.

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

### For the customers in the USA

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### Owner’s Record

The model and serial numbers are located on the rear exterior of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

The following FCC statement applies only to the version of this model manufactured for sale in the USA. Other versions may not comply with FCC technical regulations.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (aerial).
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION**

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

**Important Safety Instructions**

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**For the customers in Europe**

**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessories: Remote Control.



**Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)**

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

## Trademarks

This system incorporates with Dolby\* Digital and Dolby Pro Logic adaptive matrix surround decoders.

\* Manufactured under license from Dolby Laboratories.  
Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

This system incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

“BRAVIA” is a trademark of Sony Corporation.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Windows Media is a registered trademark of Microsoft Corporation in the United States and/or other countries.

ABOUT MPEG-4 VISUAL: THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE <http://www.mpegla.com/>

### For non-US models:

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com/](http://vod.divx.com/) with this code to complete the registration process and learn more about DivX VOD.

DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license.

## About these Operating Instructions

“DVD” may be used as a general term for a DVD VIDEO, DVD+RW/DVD+R, and DVD-RW/DVD-R.

### The system enters standby mode automatically.

When the system is in pause, stop, open, or no disc mode, the system will enter standby mode automatically after 30 minutes.

## Playable Discs

DVD	DVD-ROM DVD-R/DVD-RW DVD+R/DVD+RW
CD	CD-DA (Music CD) CD-ROM CD-R/CD-RW VIDEO CD Super VCD

A CD or DVD will not play if it has not been correctly finalized. For more information, refer to the operating instructions supplied with the recording device.

### Discs that cannot be played

- Blu-ray Discs
- HD DVDs
- DVD-RAMs
- DVD Audio discs
- PHOTO CDs
- Super Audio CDs
- Data track of CD-Extras
- Audio material side on DualDiscs
- DVD-R/DVD-RW/DVD+R/DVD+RW in VR (Video Recording) mode
- CPRM (Content Protection for Recordable Media)-compatible DVD-R/RW containing content flagged as “Copy once.”

### Notes on discs

This product is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this product.


### Note on playback operations of a DVD

Some playback operations of a DVD may be intentionally restricted by software producers. Since this system plays a DVD according to the disc contents the software producers designed, some playback features may not be available.

### Note about double-layer DVDs

The playback picture and sound may be momentarily interrupted when the layers switch.

### Region code (DVD VIDEO only)

Your system has a region code printed on the rear of the unit and will only play a DVD VIDEO (playback only) labeled with an identical region code or 

### Note about Multi Session CD

You cannot play all sessions of a multisession disc.

## Playable Types of Files

### Video

File format	Extensions
MPEG4 Video <sup>1)</sup>	“.mp4,” “.m4v”
DivX Video <sup>2)</sup>	“.avi,” “.divx”

### Music

File format	Extensions
MP3 (MPEG1 Audio Layer 3) <sup>3)</sup>	“.mp3”
WMA <sup>4)</sup>	“.wma”
AAC	“.m4a”

### Photo

File format	Extensions
JPEG	“.jpg,” “.jpeg”

- 1) AVC is not compatible.
- 2) Unavailable on US models.
- 3) MP3PRO format is not compatible.
- 4) WMA DRM, WMA Lossless or WMA PRO format are not compatible.

### Note

 
 
 

 



 
 

- Some files may not play depending on the format, the encoding, or recording condition.
- Some USB devices may not work with this system.
- The system supports ISO 9660 Level 1/ Level 2, or Joliet in DATA CD.
- The system supports UDF (Universal Disk Format) in DATA DVD.
- The system supports FAT12, FAT16, and FAT32 in USB device.
- The system can recognize the following files or folders in DATA DVD, DATA CD and USB device:
  - up to 300 folders
  - up to 648 files

- It may take time to read files in the following cases:
  - there are many folders or files.
  - the memory capacity of the USB device that you are using is very large.
  - the memory of the USB device that you are using is fragmented.

## Unpacking


### Checking the supplied items

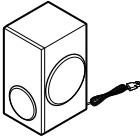(The inclusion of a SCART adapter and HDMI cable varies depending on the area/model.)

- Main unit (1) 
- Speakers (5) 
- Remote commander (remote) (1) 
- Subwoofer (1) 
- FM wire antenna (aerial) (1) 
- or 
- Video cord (1) 
- SCART adapter (1) 
- Operating Instructions (this manual)
- R6 (size AA) batteries (2) 
- Foot pads (subwoofer) (1 set) 
- HDMI cable (1) 

### Preparing the remote control

Insert two R6 (size AA) batteries (supplied) by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment.

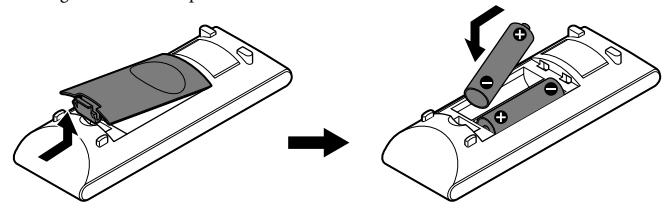


## Connecting the Speakers


### Caution

Do not use any speakers other than those supplied with this system.
 
### To attach the foot pads to the subwoofer



Remove the foot pads from the protective cover.


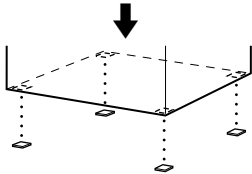


### Note

- Use caution when placing the speakers and/or speaker stands attached to the speakers on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

Insert the connectors of the speaker cords to match the color of the SPEAKERS jacks of the unit until they click.

### Rear panel of the main unit

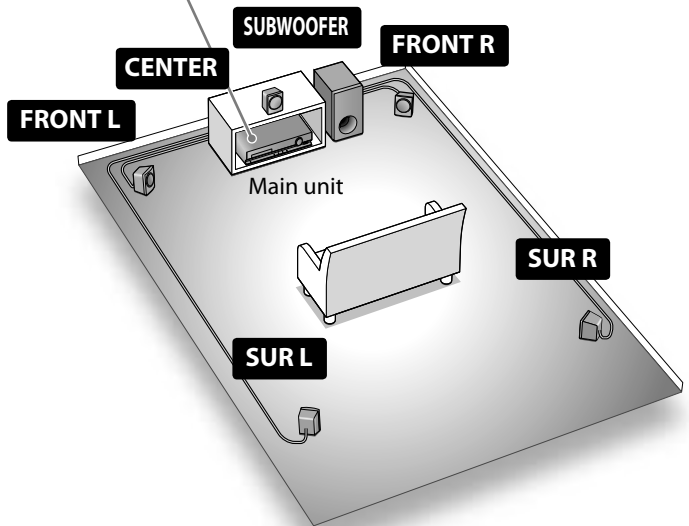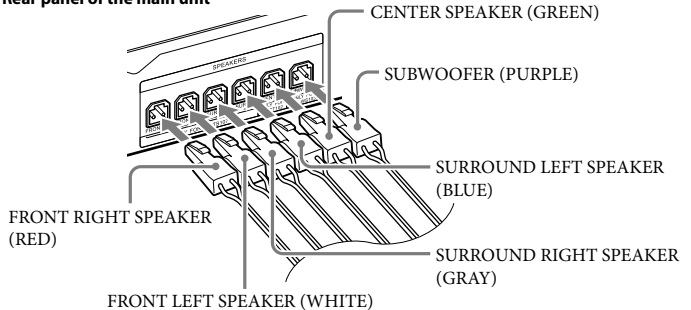


# Connecting your TV


Depending on the jacks on your TV or set-top box, select the video and audio connection method.

## Connecting your TV/set-top box

When connecting to a TV only

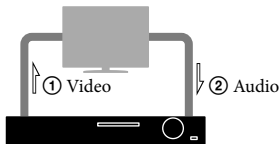


When connecting to a TV and set-top box

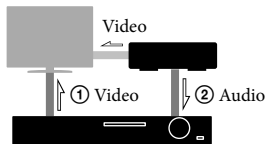

### 1 Connecting the video to your TV

Depending on the jacks on your TV, select one of the connection methods.

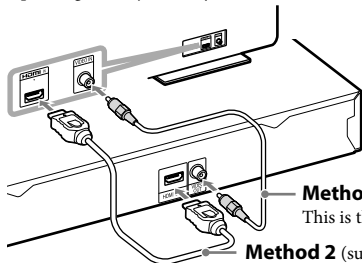


**Method 1 (supplied)**  
This is the basic connection.

**Method 2 (supplied only with certain models)**  
Picture quality will be improved compared to Method 1.

### 2 Connecting the audio from your TV/set-top box


To listen to TV or set-top box sound via the system, you need to perform a connection with an audio cord (not supplied).

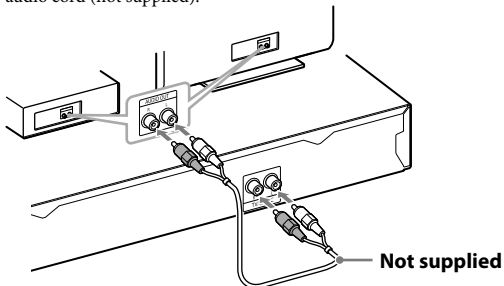

### Tip

- For European models, connect the video cord (supplied) and an audio cord (not supplied) to the TV via the SCART adapter.

### Connecting the FM wire antenna (aerial)

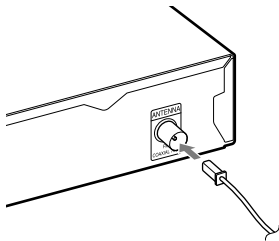

### Tip

 
- If you have poor FM reception, use a 75-ohm coaxial cable (not supplied) to connect the unit to an outdoor FM antenna (aerial).

## When Installing the Speakers on a Wall


### Caution

- Contact a screw shop or installer for information regarding the wall material or screws to be used.
- Use screws that are suitable for the wall material and strength. As a plaster board wall is especially fragile, attach the screws securely to a beam. Install the speakers on a vertical and flat wall where reinforcement is applied.
- Sony is not responsible for accidents or damage caused by improper installation, insufficient wall strength or improper screw installation, natural calamity, etc.

- Prepare screws (not supplied) that are suitable for the hole on the back of each speaker. See the illustrations below.**





Hole on the back of the speaker

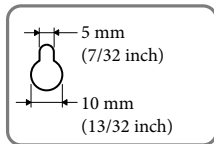


- Fasten the screws to the wall, then hang the speaker on the wall.**

### Depth of fastened screw

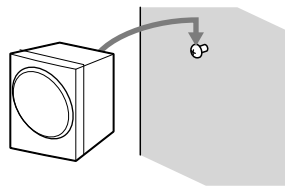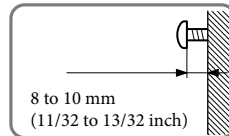

## Color System Setup

- 1 Connect the AC power cord.
- 2 Turn on the power of the main unit and TV.

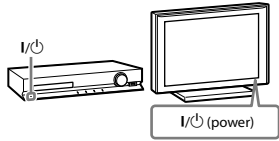


- 3 Press **FUNCTION** repeatedly or **DVD/CD** to switch the function to **DVD/CD**. Playback starts automatically if a disc with an auto playback function is loaded. Press **■** twice to stop playback.
- 4 Switch the input selector on your TV to display "Home Theatre System."
- 5 Press **SETUP** in stop mode. The Setup Menu appears.
- 6 Press **←/→** repeatedly to select [Preference Page], then press **⊖**.
- 7 Press **↑/↓** repeatedly to select [TV Type], then press **⊖**.
- 8 Press **↑/↓** repeatedly to select [PAL] or [NTSC] from the displayed list, then press **⊖**.
- 9 Press **SETUP** to turn off the Setup Menu.

### Note

- The display on the TV screen may be interrupted momentarily after changing the color system as described above.

## Parts and Controls:

### Front panel

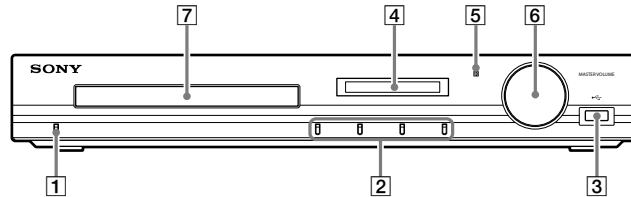


- 1 **I/⏻ (on/standby)**  
Turns on the unit, or sets it to standby mode.
- 2 **Play operation buttons**  
**▲ (open/close)**  
Opens or closes the disc tray.  
**▶ (play)**  
Starts or re-starts playback (resume play).  
**■ (stop)**  
Stops playback and remembers the stop point (resume point).  
The resume point for a title/track is the last point you played.

### FUNCTION

Selects the playback source.


- 3 **+↔ (USB) port**  
Used for connecting a USB device.
- 4 **Front panel display**
- 5 **Ⓜ (remote sensor)**
- 6 **MASTER VOLUME control**  
Adjusts the system's volume.
- 7 **Disc tray**

### Rear panel

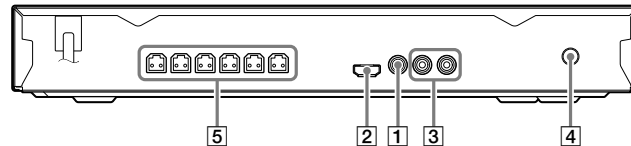

- 1 **VIDEO OUT jack**
- 2 **HDMI OUT jack**
- 3 **TV/CABLE (AUDIO IN L/R) jacks**
- 4 **ANTENNA (FM COAXIAL 75Ω) jack**
- 5 **SPEAKERS jacks**

### Remote control

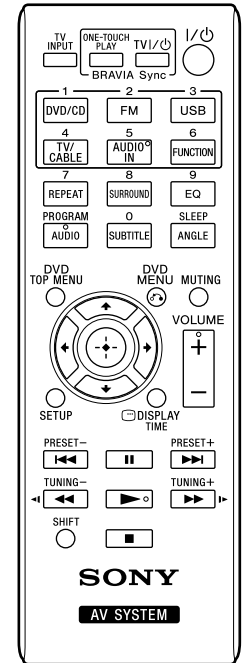

### TV INPUT

Switches the TV's input source between the TV signal and other input sources.

### BRAVIA Sync

### ONE-TOUCH PLAY

Activates One-Touch Play.

### TV I/⏻ (on/standby)

Turns on the TV or sets it to standby mode.



**I/⏻ (on/standby)**

Turns on the system or sets it to standby mode.

**Function selection buttons**

Select the playback source.

**DVD/CD****FM****USB****TV/CABLE****FUNCTION**

Selects the functions in sequence.

**REPEAT**

Activates repeat/shuffle playback mode.

**SURROUND**

Selects surround audio output mode.

**EQ**

Selects EQ mode.

**AUDIO**

Selects the audio format/track and the FM mode.

**SUBTITLE**

Selects the subtitle language when multilingual subtitles are available.

**ANGLE**

Switches to other viewing angles when multi-angles are recorded on a DVD VIDEO.

**Number buttons**

Enter the title/chapter numbers, preset radio stations, etc.

**PROGRAM**

Activates program play and presets radio stations.

**SLEEP**

Sets the sleep timer.

**DVD TOP MENU**

Opens the DVD's Top Menu.

**⏻ DVD MENU**

Opens or closes the DVD's menu.

**MUTING**

Turns off the sound temporarily.

**⏪/⏩/⏮/⏭**

Moves the highlight to a displayed item.

**⏹ (ENTER)**

Enters the selected item.

**VOLUME +/-**

Adjusts the volume.

**SETUP**

Opens or closes the setup menu.

**⏻ DISPLAY**

Opens or closes the Display Menu.

**TIME**

Switches time information during playback.

**Playback operation buttons**

**⏪/⏩** (previous/next)

**⏮/⏭** (fast reverse/fast forward)

**⏮/⏭** (slow)

Activates slow reverse/slow forward when pressed in pause mode.

**▶** (play)

**⏸** (pause)

**■** (stop)

**Radio operation buttons**

**PRESET +/-**

**TUNING +/-**

**SHIFT**

Press and hold this button to use buttons with pink text labels.

**Note****AUDIO IN**

This button does not work.


## Playing a Disc

### 1 Press DVD/CD.

You can also select this function by pressing FUNCTION repeatedly.

### 2 Press ▲ to open the disc tray.

### 3 Place a disc on the tray, then press ▲.

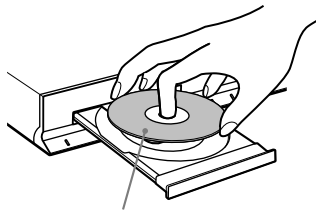

With the label side up.

### 4 Press ► to start playback.

### 5 Press VOLUME +/- to adjust the volume.

## Playing Files on a Disc/USB Device

### 1 Press DVD/CD or USB.

- DVD/CD: For a disc.
- USB: For a USB device.

You can also select the function by pressing FUNCTION repeatedly.


### 2 Load the source.

#### ■ For a disc

Place a disc on the tray by pressing ▲ to open/close the disc tray.

#### ■ For a USB device

Connect a USB device to the ◀ (USB) port.

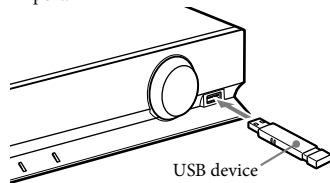

### 3 Press ↑/↓ to select a folder, then press + and select a file.

### 4 Press ► to start playback.

### 5 Press VOLUME +/- to adjust the volume.

#### Note

- Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the system off when connecting or removing the USB device.

## Other Playback Operations

### To change angles

Press ANGLE during playback to select the desired angle.

### To display subtitles

Press SUBTITLE during playback to select the desired subtitle language.

### To change the sound

When the system is playing a DVD VIDEO, DivX video file, or MPEG4 video file recorded in multiple audio formats (PCM, Dolby Digital, or MPEG audio), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language.

With a VIDEO CD or CD, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. Press AUDIO repeatedly during playback to select the desired audio signal.

The selected audio signal format is displayed on the TV screen.

### To play a VIDEO CD with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

#### To play without using PBC

Press and hold SHIFT, then press the number buttons to select the item number you want in stop mode.

### To search for a title/chapter/track/scene, etc.

#### ■ When playing a DVD/VCD

### 1 Press ◻ DISPLAY during play.

The Display Menu appears on the TV screen.

### 2 Press ↑/↓ to select an option, then press ◻.

### 3 Press and hold SHIFT, then press the number buttons to jump to the desired option.

#### ■ When playing a CD

### 1 Press ◻ DISPLAY during play.

The selection display appears on the TV screen.

### 2 Press and hold SHIFT, then press the number buttons to select the desired track.

#### ■ When playing an MP3/JPEG/DivX file

### 1 Press ◻ DISPLAY during play.

The selection display appears on the TV screen.

### 2 Press and hold SHIFT, then press the number buttons to select the desired number.

### To play in programmed order

Selects the tracks to play in the order you want (only for CDs).

### 1 Press and hold SHIFT, then press PROGRAM.

The Program Menu display appears on the TV screen.

### 2 Press and hold SHIFT, then press the number buttons to select the desired track.

### 3 Press ◀/↑/↓/→ to select [Start] to play the program.

## To play repeatedly/shuffle, etc.

Press REPEAT repeatedly to select the desired playback mode. The selected mode appears in the front panel display.

- “REP CHP”: Repeats the current chapter.
- “REP TT”: Repeats the current title.
- “REP ALL”: Repeats all titles.
- “REP TRA”: Repeats the current track.
- “REP OFF”: The system returns to normal playback mode.
- “SHUFFLE”: Plays the contents once in random order until all the contents have been played.
- “SHUF REP”: Repeats shuffle play.
- “FOLDER”: Plays the current folder.
- “RANDOM”: Plays all files in random order.
- “SINGLE”: Plays the current file.
- “REP ONE”: Repeats the current file.
- “REP FLD”: Repeats the current folder.

### Note

- The selectable modes and their order differ depending on the disc or file.

## Selecting the Sound Effect

### To select an equalizer setting

Press EQ repeatedly during playback until the desired mode appears on the front panel display.

- “FLAT”: Flat and pure sound mode.
- “CLASSIC”: Ideal for listening to classical music and watching live concert DVDs.
- “JAZZ”: Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for jazz music and watching dramas.
- “ROCK”: Enhanced low and high range for great sounding movie effects and atmosphere. Great for action movies and rock/pop music.

### To select a surround setting

Press SURROUND repeatedly during playback to select a surround audio output mode. The selected mode appears in the front panel display.

- “MULTI” (A.F.D. MULTI): When the source is 2 channel, sound is output from all speakers.
- “STANDARD” (A.F.D. STANDARD): The system discriminates the sound format of the source and presents sound as it was recorded/encoded.
- “DOLBY PL”(PRO LOGIC): Performs Dolby Pro Logic decoding.
- “2CH ST” (2CH STEREO): All formats are downmixed to 2 channels.

### Note

- Depending on the playback stream, the surround settings may not be effective.

## Using a Tuner

### To preset radio stations

You can preset 20 FM stations. You can then tune in any of those stations simply by selecting the corresponding preset number.

- 1 Press FM.**
- 2 Press and hold TUNING +/- for 2 seconds to start tuning until you find the desired radio station.**  
“SEARCH +” or “SEARCH -” appears in the front panel display until a radio station with sufficient signal strength is found.
- 3 Press and hold SHIFT, then press PROGRAM.**  
“P 01” flashes in the front panel display.
- 4 Press and hold SHIFT, then press the number buttons to select a preset number.**
- 5 Press  $\oplus$  to store the station frequency.**

### To select a preset radio station

- 1 Press FM.**
- 2 Press PRESET +/- to select a preset number.**  
You can also select a preset number by pressing and holding SHIFT, then pressing the number buttons.

If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.

### Press AUDIO.

“STEREO”: Stereo reception.

“MONO”: Monaural reception.

## Convenient Functions

### About the Control for HDMI function ("BRAVIA" Sync)

You can control a TV compatible with the Control for HDMI function by connecting it to the system via an HDMI cable.

#### Available features

- One-Touch Play  
With one touch of ONE-TOUCH PLAY on the remote control, the system and your TV automatically turn on and the TV's input is switched to the system. Playback starts automatically.
- System-Power Off  
When you turn the TV off by using the I/⏻ button on the TV's remote control or TV I/⏻ on the system's remote control, the system turns off automatically.
- System Audio Control  
You can switch the audio output to either the TV speakers or this system's speakers via the TV's menu.

### Sleep timer

You can set the system to turn off at a preset time, so you can fall asleep listening to music.

#### Press and hold SHIFT, then press SLEEP.

Each time you press this button, the minute display (the remaining time) changes by 10 minutes.

A countdown of the last 20 seconds until the unit turns off appears in the front panel display.

#### To check the remaining time

Press and hold SHIFT and SLEEP for 3 seconds. The remaining time until the unit turns off appears in the front panel display.

#### To cancel the sleep timer function

Press and hold SHIFT, then press SLEEP repeatedly until "OFF" appears in the front panel display.

### To view information about the disc

You can check the playing time and remaining time of the current title, chapter, or track.

#### Press and hold SHIFT, then press TIME repeatedly.

Each time you press and hold SHIFT, then press TIME while playing the disc, the displayed item changes depending on the disc.


## Using the Setup Display

You can make various adjustments to items such as picture and sound.

Displayed items vary depending on the country model.

The default setting is underlined.


- 1 **Press SETUP in stop mode.**  
The setup menu appears.
- 2 **Press ←/→ to select one of the setup menu categories, then press ⊕.**
- 3 **Press ↑/↓ to select a setup item, then press → or ⊕.**
- 4 **Select the option you wish to change and press ⊕ to confirm and go back to the previously selected item.**
- 5 **Press SETUP to turn off the menu.**

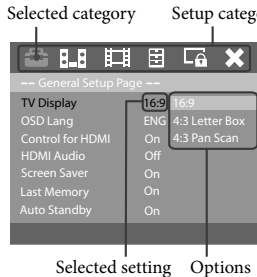

### General Setup Page

#### ■ [TV Display]

 
[16:9]: Select this when you connect a wide-screen TV or a TV with a wide mode function.



[4:3 Letter Box]: Displays a wide picture with black bands on the top and bottom.



 [4:3 Pan Scan]: Displays a full-height picture on the entire screen, with trimmed sides.



#### ■ [OSD Lang] (On-Screen Display)

You can switch the display language on the TV screen.

#### ■ [Control for HDMI]

This function is available when you connect the system and a TV that is compatible with the Control for HDMI function via an HDMI cable.

[On]: You can operate mutually between components that are connected via an HDMI cable.

[Off]: Off.

#### ■ [HDMI Audio]

This setting is only required if you are using the HDMI OUT jack for an audio connection.

[Off]: Turns off HDMI audio output. You can still enjoy sound output via the speaker system.

[All]: The HDMI audio output format will be same as the audio stream being played. If the playback audio format is not supported, the audio output will be changed to PCM automatically.

[PCM]: HDMI audio output will be downmixed to linear PCM (2-channel).

### ■ [Screen Saver]

[On]: The screen saver image appears if you do not operate the system for about 15 minutes.

[Off]: Off.

### ■ [Last Memory]

This system recalls the point where you stopped the disc the last time it was played and resumes playback from that point the next time you insert the same disc.

[On]: The system stores the resume points in memory.

[Off]: The system does not store the resume points in memory. Playback restarts at the resume point only for the current disc in the unit.

### Note

- When the resume playback memory is full, the resume playback point for the earliest disc is deleted.

### ■ [Auto Standby]

[On]: Enters standby mode automatically when in stop, pause, no disc, or eject mode for more than 30 minutes.

[Off]: The unit does not enter standby mode automatically.

## Speaker Setup Page

### ■ [Level]

You can adjust the sound level of all the speakers and the subwoofer.

[L]: Adjusts the sound level of left speaker. It is possible to adjust the parameter from -6.0 dB to +0.0 dB.

[C]: Adjusts the sound level of center speaker. It is possible to adjust the parameter from -6.0 dB to +6.0 dB.

[R]: Adjusts the sound level of right speaker. It is possible to adjust the parameter from -6.0 dB to +0.0 dB.

[RS]: Adjusts the sound level of right surround speaker. It is possible to adjust the parameter from -6.0 dB to +6.0 dB.

[LS]: Adjusts the sound level of left surround speaker. It is possible to adjust the parameter from -6.0 dB to +6.0 dB.

[SW]: Adjusts the sound level of subwoofer. It is possible to adjust the parameter from -6.0 dB to +6.0 dB.

### ■ [Distance]

If you move one of the speakers, be sure to set the parameters of the distance from the listening position to speakers.

[L/R]: Adjusts the distance of the left/right speakers. It is possible to adjust the parameter from 1.0 m to 7.0 m (3 to 23 ft).

[C]: Adjusts the distance of the center speaker. It is possible to adjust the parameter from (A) 1.6 m shorter than the setting of the L/R channel to (B) the same setting of the L/R channel ((L/R-5 ft) to L/R).

[Ls/Rs]: Adjusts the distance of the left/right surround speaker. It is possible to adjust the parameter from (A) 5.0 m shorter than the setting of the L/R channel to (B) the same setting of the L/R channel ((L/R-16 ft) to L/R).

### ■ [Center Speaker]

[On]: Activates the center speaker.

[Off]: Deactivates the center speaker.

### ■ [Sur. Speaker]

[On]: Activates the surround speakers.

[Off]: Deactivates the surround speakers.

### ■ [Test Tone]

The speakers will emit a test tone to set the Level.

[On]: The speakers emit the test tone.

[Off]: The speakers do not emit the test tone.

### Tip

- To adjust the volume of all speakers, turn MASTER VOLUME on the unit or press VOLUME +/- on the remote control.

- Press ←/↑/↓/→ repeatedly to select the speaker and the desired level or distance.

## Video Setup Page

### ■ [HDMI Resolution]

You can select the type of video signal that is output from the HDMI OUT jack.

[Auto]: The system outputs the optimal video signal for the connected TV.

[480p/576p]: The system outputs 720 × 480p\* or 720 × 576p\* video signals.

[720p]: The system outputs 1280 × 720p\* video signals.

[1080i]: The system outputs 1920 × 1080i\* video signals.

[1080p]: The system outputs 1920 × 1080p\* video signals.

\* i: interlace, p: progressive

### For non-US models:

#### ■ [DivX VOD]

[→]: Displays the DivX® registration code.

### Tip

- Enter this unit's DivX registration code when you rent or purchase video from vod.divx.com/. DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which they are registered.

## Preference Page

### ■ [TV Type]

The TV type default setting varies depending on the area.

[PAL]: For a PAL-system TV.

[NTSC]: For an NTSC-system TV.

### ■ [Audio]

Selects the preferred audio language for DVDs with multiple sound tracks.

### ■ [Subtitle]

You can switch the language of the subtitles recorded on a DVD VIDEO.

### ■ [Disc Menu]

You can switch the language for a disc's menu.

### ■ [Parental]

You can restrict playback of DVDs that have ratings. Scenes may be blocked or replaced with different scenes.

- 1 Press ↑/↓ to select a rating level from 1 to 8 or [Off], then press ⊕.
- 2 Press and hold SHIFT, then press the number buttons to enter your 6-digit password.

### ■ [Default]

This feature enables you to reset all the setup menu options and your personal settings to the factory defaults, except for your password for the [Password] and [Parental] items. Press ⊕ to confirm the default reset.

## Password Setup Page

### ■ [Password]

The default password is "000000." To change the password:

- 1 Press and hold SHIFT, then press the number buttons to enter "000000" or your last set 6-digit password in the [Old Password] section.
- 2 Press and hold SHIFT, then press the number buttons to enter a new 6-digit password in the [New Password] section.
- 3 Press and hold SHIFT, then press the number buttons to enter the new 6-digit password again in the [Confirm PWD] section to confirm your entry.
- 4 Press [OK] to exit the menu.

## Precautions

### On placement

- At high volume, over long periods of time, the cabinet becomes hot to the touch. This is not a malfunction. However, touching the cabinet should be avoided. Do not place the system in a confined space where ventilation is poor as this may cause overheating.
- Do not install the system near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not install the system in an inclined position. It is designed to be operated in a horizontal position only.
- Do not place heavy objects on the system.

### On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

### On cleaning

- Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzene.  
If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

### On cleaning discs, disc/lens cleaners

- Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.

### On your TV's color

#### IMPORTANT NOTICE

Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

### On moving the system

Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).

### On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.
- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.

### On cleaning discs

- Before playing, clean the disc with a cleaning cloth.  
Wipe the disc from the center out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

This system can only play back a standard circular disc. Using neither standard nor circular discs (e.g., card, heart, or star shape) may cause a malfunction.  
Do not use a disc that has a commercially available accessory attached, such as a label or ring.

### On heat radiation

Due to the slim type of main unit design, you may feel some heat on the top of the unit. This is normal. Please consult your nearest Sony dealer if you have any questions.

## Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

Note that if service personnel changes some parts during repair, these parts may be retained.

### Power

#### The power is not turned on.

- Check that the AC power cord (mains lead) is connected securely.

### Picture

#### There is no picture.

- The video connecting cords are not connected securely.
- The unit is not connected to the correct TV input jack.
- The system is not selected via the video input of the TV.
- Check the output method on your system.

#### Even though you set the aspect ratio in [TV Display] of [General Setup Page], the picture does not fill the TV screen.

- The aspect ratio on the disc is fixed.



 
#### Color irregularity occurs on the TV screen.

- The system's speakers contain magnet parts, so magnetic distortion may occur. When color irregularity occurs on the TV screen, check the following items.
- Install the speakers at least 0.3 meters (1.0 ft) from your TV set.

- If the color irregularity persists, turn off the TV set once, then turn it on after 15 to 30 minutes.
- Reposition the speakers farther away from your TV set.

### The [TV Type] setting does not match your TV.

[TV Type] can be reset according to the following procedure:

1. Press  to take out the disc.
2. Press  DISPLAY.
3. Press .

[TV Type] will be reset.

## Sound

### There is no sound. Severe hum or noise is heard.

- The speaker cords are not connected securely.
- Clean the disc.

### The sound loses stereo effect when you play a VIDEO CD or CD.

- Set the audio setting to [Stereo] by pressing AUDIO.

## Operation

### Radio stations cannot be tuned in.

- Check that the antenna (aerial) is connected securely. Adjust the antenna (aerial) or connect an external antenna (aerial) if necessary.

### A disc does not play.

- The region code on the DVD does not match the system.
- Moisture has condensed inside the unit and may cause damage to the lenses. Remove the disc and leave the unit turned on for about half an hour.

### A DATA CD/DATA DVD cannot be played.

- The DATA CD is not recorded in ISO 9660 Level 1/Level 2, or Joliet.
- The DATA DVD is not recorded in UDF (Universal Disk Format).

### A JPEG image file cannot be played.

- It is larger than 2,048 (width) × 1,536 (height) in normal mode, or more than 2,000,000 pixels in progressive format which is mainly used on Internet Web sites.




### A DivX video file cannot be played.

- The DivX video file is larger than 720 (width) × 576 (height).

### The name of a folder or file is not displayed correctly.

- The system can only display numbers and letters of the alphabet. Other characters are displayed as [ \_ ].

### A disc does not start playing from the beginning.

- Resume Play has been selected. During stop, press  and then start playback.
- Program play has been selected. During stop, press  and then start playback.
- Shuffle play has been selected. During stop, press  and then start playback.

### A disc cannot be ejected and "LOCKED" appears in the front panel display.

- Contact your Sony dealer or local authorized Sony service facility.

### The system does not work normally.

- Disconnect the AC power cord (mains lead) from the wall outlet (mains), then reconnect after several minutes.


### The Control for HDMI function does not work.

- Set the [Control for HDMI] setting in [General Setup Page] to [On].

- Make sure that the connected component is compatible with the [Control for HDMI] function.
- Check the connected component's setting for the Control for HDMI function. Refer to the operating instructions supplied with the component.

## USB device

### "OVERLOAD" appears in the front panel display.

- Remove the USB device from the  (USB) port. Make sure there is no problem with the USB device.

### The USB device (audio file/JPEG image file) cannot be played.

- Files that are encrypted or protected by passwords, etc., cannot be played.
- There is no playable file in the USB device.

# Specifications

## AUDIO POWER SPECIFICATIONS for the U.S. models

POWER OUTPUT AND TOTAL  
HARMONIC DISTORTION:  
(FTC)

Front L + Front R With 3 ohms loads,  
both channels driven,  
from 180 - 15,000 Hz;  
rated 23 watts per  
channel minimum  
RMS power, with no  
more than 1% total  
harmonic distortion  
from 250 milli watts to  
rated output.

### Amplifier Section

POWER OUTPUT (rated):

Front L + Front R 32 W + 32 W (at 3  
ohms, 1 kHz, 1%  
THD)

POWER OUTPUT (reference):

Front L/Front R/  
Surround L/Surround  
R: 43 watts (per  
channel at 3 ohms, 1  
kHz)  
Center: 89 watts (per  
channel at 6 ohms, 1  
kHz)  
Subwoofer: 89 watts (at  
6 ohms, 100 Hz)

### Inputs

TV/CABLE: Pin jack

## CD/DVD System

Laser Diode Properties

Emission Duration:  
Continuous  
Laser Output\*: Less  
than 1,000  $\mu$ W

\* This output is the value measurement at a  
distance of 200 mm from the objective lens  
surface on the Optical Pick-up Block with  
7 mm aperture.

### USB Section

⚡ (USB) port:

Maximum current: 500 mA

### Tuner Section

System PLL quartz-locked  
digital synthesizer

Tuning range

North American and Brazilian models:

87.5 MHz - 108.0 MHz  
(100 kHz step)

Other models:  
87.5 MHz - 108.0 MHz  
(50 kHz step)

Antenna (aerial) terminals

75 ohms, unbalanced

Intermediate frequency

10.7 MHz

### Video Section

Outputs

VIDEO: Pin jack  
HDMI OUT: HDMI  
19-pin

### Speakers

Front

#### SS-TS107

Dimensions (approx.) 91 mm  $\times$  112 mm  $\times$   
101 mm (3 <sup>5</sup>/<sub>8</sub> in  $\times$   
4 <sup>1</sup>/<sub>2</sub> in  $\times$  4 in) (w/h/d)  
incl. projecting parts

Mass (approx.) 0.4 kg (15 oz)

## Center

### SS-CT102

Dimensions (approx.) 91 mm  $\times$  112 mm  $\times$   
101 mm (3 <sup>5</sup>/<sub>8</sub> in  $\times$   
4 <sup>1</sup>/<sub>2</sub> in  $\times$  4 in) (w/h/d)  
incl. projecting parts

Mass (approx.) 0.5 kg (1 lb 2 oz)

### Surround

#### SS-TS107

Dimensions (approx.) 91 mm  $\times$  112 mm  $\times$   
101 mm (3 <sup>5</sup>/<sub>8</sub> in  $\times$   
4 <sup>1</sup>/<sub>2</sub> in  $\times$  4 in) (w/h/d)  
incl. projecting parts

Mass (approx.) 0.4 kg (15 oz)

### Subwoofer

#### SS-WS103

Dimensions (approx.) 190 mm  $\times$  345 mm  $\times$   
225 mm (7 <sup>1</sup>/<sub>2</sub> in  $\times$   
13 <sup>5</sup>/<sub>8</sub> in  $\times$  8 <sup>7</sup>/<sub>8</sub> in)  
(w/h/d) incl. projecting  
parts

Mass (approx.) 3.5 kg (7 lb 12 oz)

### General

Power requirements

North American and Mexican models:

120 V AC, 60 Hz

Argentine models: 220 V - 240 V AC,

50/60 Hz

Brazilian models: 127 V - 240 V AC,

50/60 Hz

Latin American models:

110 V - 240 V AC,

50/60 Hz

Other models: 220 V - 240 V AC,

50/60 Hz

Power consumption On: 67 W

Standby: <1 W\*

\* Valid when the system is in the following  
status:

— [Control for HDMI] is set to [Off].

Dimensions (approx.) 360 mm  $\times$  56 mm  $\times$   
342 mm (14 <sup>1</sup>/<sub>4</sub> in  $\times$   
2 <sup>1</sup>/<sub>4</sub> in  $\times$  13 <sup>1</sup>/<sub>2</sub> in) (w/  
h/d) incl. projecting  
parts

Mass (approx.) 2.6 kg (5 lb 12 oz)

Design and specifications are subject to  
change without notice.



