





LCI DIGITAL WIRELESS SYSTEM W/LCD REMOTE


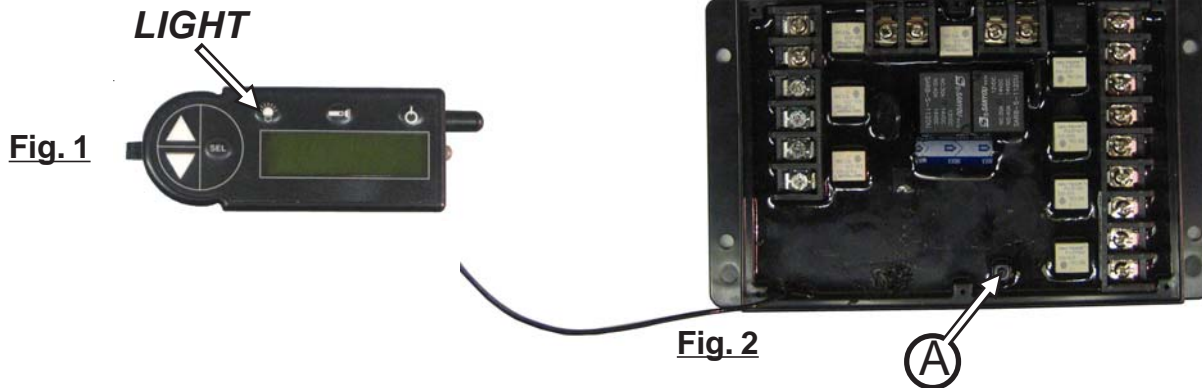


SYNCING REMOTE-(TRANSMITTER - Fig. 1) TO THE BRAIN-(RECEIVER - Fig. 2)

1. Must have 12VDC to brain.
 2. Remote must be power by battery.
 3. Push and hold back button (A) on the brain.
 4. While black button on the brain is depressed, push and release "LIGHT"  button on remote.
- NOTE:** If close enough to brain, an audible "click" can be heard verifying brain is programmed to remote.
5. Release black button.
 6. If a second remote needs to be programmed to brain, repeat steps 2 through 5 with the second remote.

NOTE: Program only two (2) remotes per brain.

PROGRAMMING REMOTE TO TERMINALS ON THE BRAIN

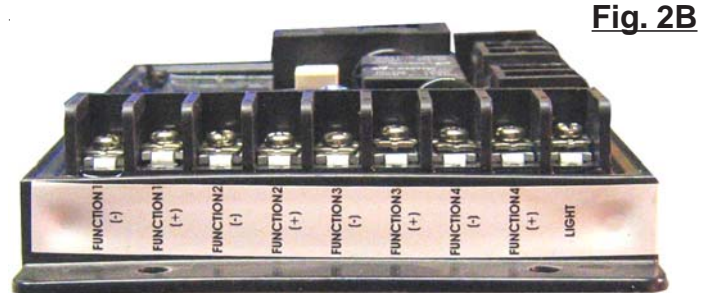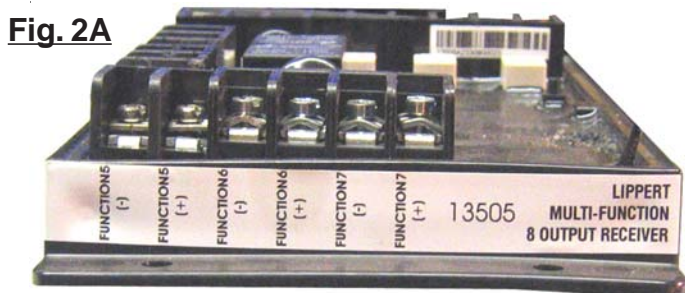

Programming the remote to the specific terminals offer flexibility in the installation process allowing for more and easier wiring route options. Fig. 2A shows the POWER (+) and GROUND(-) terminals 5-7 on the left side of the brain in Fig. 2. Fig. 2B shows the POWER(+) and GROUND(-) terminals 1-4



LCI DIGITAL WIRELESS SYSTEM W/LCD REMOTE

PROGRAMMING REMOTE TO TERMINALS ON THE BRAIN, CON'T



Fig. 3



Fig. 4





1. Begin the PROGRAM process by pressing the POWER  button, Fig. 3(B).
2. Press and hold both UP, Fig. 4(C),  DOWN, Fig. 4(E)  while pressing SELECT, Fig. 4(D)  4 times.



Fig. 5



Fig. 6



Fig. 7

3. To select the specific function for each terminal, press the UP and DOWN arrow keys, Figs. 4(C; E) to scroll through all the options.
4. Fig. 5 shows the opening screen to the select options. FUNCT 1 determines the function for TERMINAL 1 on the BRAIN. By continuing to press the arrow keys, Fig. 6(C) the function options can be scrolled through to set the description for each terminal.
5. Press the SELECT button, Fig. 7(D), to assign the function desired for each terminal. When the SELECT button is pressed, the remote's LCD screen will switch to the next function to be assigned, Fig. 7.

NOTE: Anytime the program mode is entered, all preset functions will be cleared and all functions will need to be programmed.



Fig. 8



Fig. 9



Fig. 10

6. When all functions, 1-7 are completed, the remote will ask if there is an Alarm, Fig. 8, and then a TV Lift, Fig. 9. Answer these questions by pressing the appropriate arrow key for YES or NO.



LCI DIGITAL WIRELESS SYSTEM W/LCD REMOTE

PROGRAMMING REMOTE TO TERMINALS ON THE BRAIN, CON'T

- 7. The remote will then ask to "CYCLE POWER TO COMPLETE CONFIG," Fig. 10. Press the POWER button to shut the remote off. Press the POWER button to turn remote back on.
- 8. Follow instructions #1 and #2 on Page .



Fig. 11

- 9. Press the SELECT button, Fig. 11, to scroll through the assigned functions to confirm accuracy.
- 10. If all functions are correct, the remote is ready for operation.

OPERATION INSTRUCTION FOR WIRELESS REMOTE




- 1. Begin the PROGRAM process by pressing the POWER  button, Fig. 3(B); pg. 2.
- 2. Press UP, Fig. 4(C)  and SELECT Fig. 4(D)  buttons at the same time; see pg. 2.
- 3. Press the SELECT button, Fig. 11, to scroll through functions for operation.



Fig. 12



Fig. 13

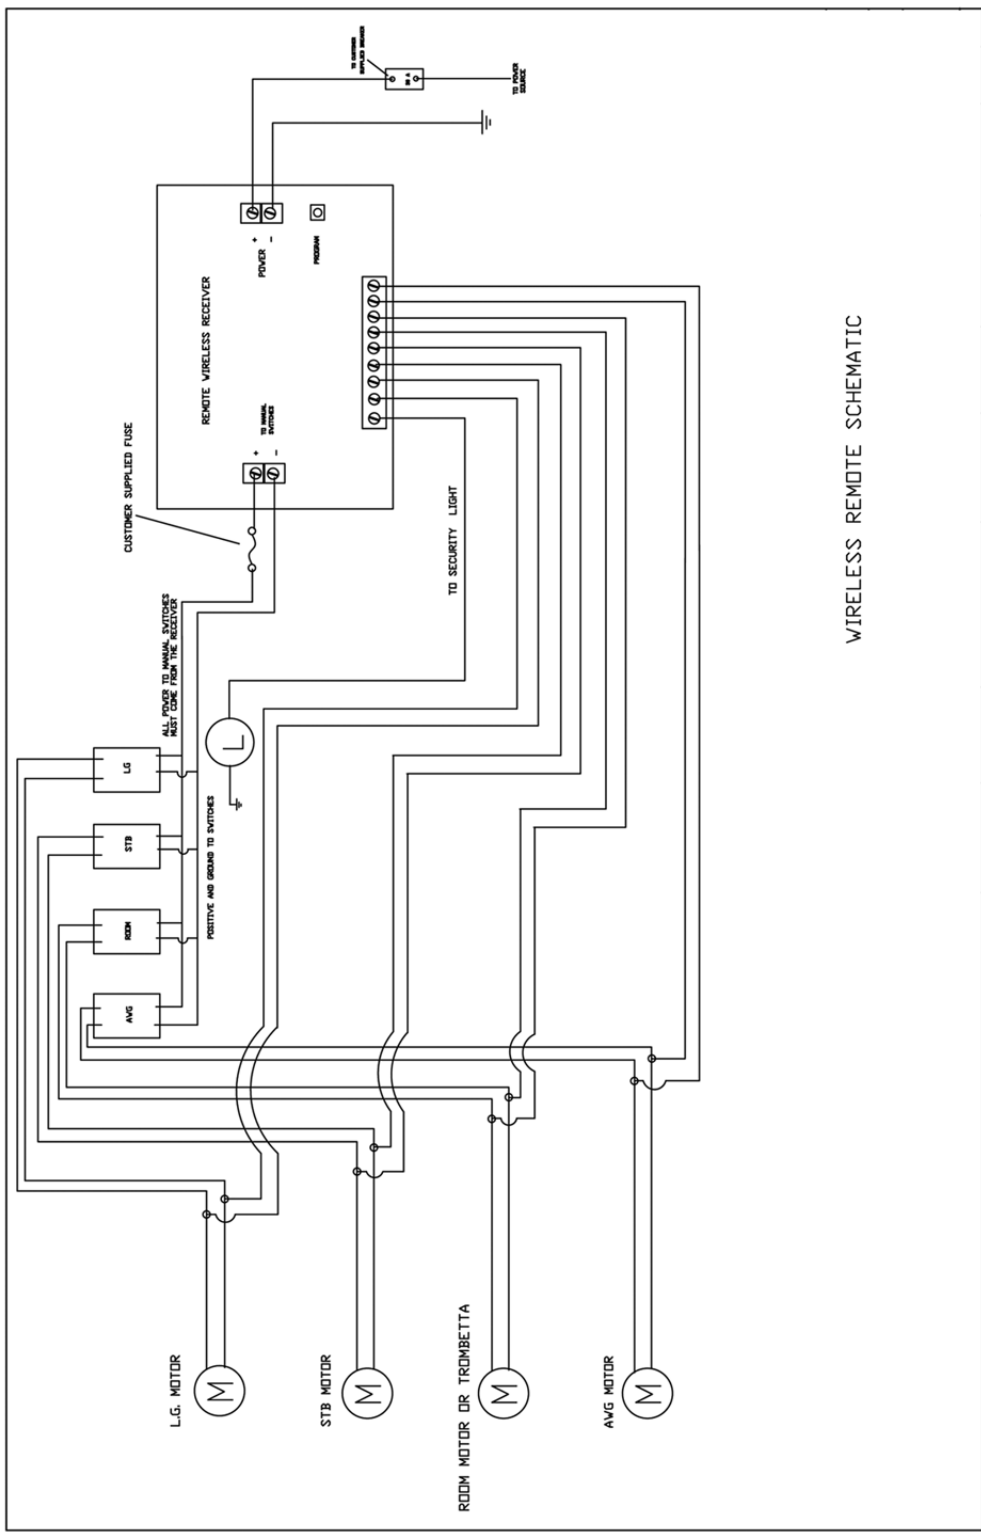


Fig. 14

- 4. When desired function is displayed, follow on screen instructions for operation.
- 5. UP arrow will EXTEND a slideout or awning and the DOWN arrow will RETRACT a slideout or awning. The UP arrow will RAISE the coach and the DOWN arrow will lower the coach.
- 6. When all desired functions are completed, press the POWER button to turn remote off. If the remote is not turned off manually, it will automatically shut down after 2 minutes.




LCI DIGITAL WIRELESS SYSTEM W/LCD REMOTE



WIRELESS REMOTE SCHEMATIC



LCI DIGITAL WIRELESS SYSTEM W/LCD REMOTE

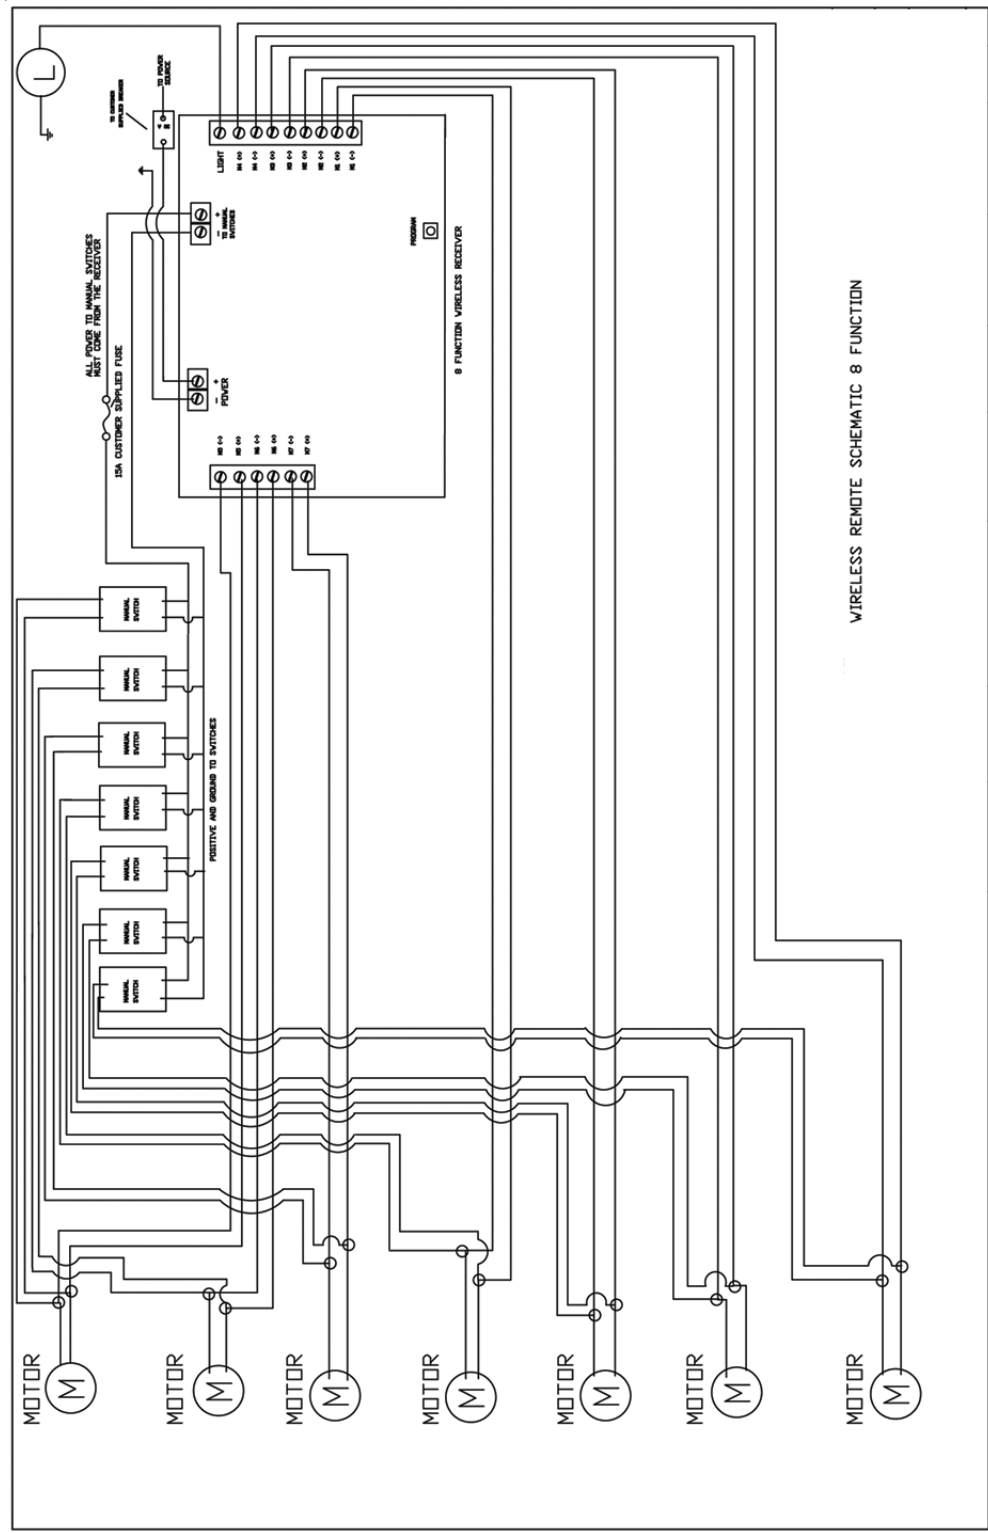

WIRELESS REMOTE SCHEMATIC 8 FUNCTION