



DIAGNOSTIC TEST

 The diagnostic test should be performed by a service technician.

TO PERFORM A DIAGNOSTIC TEST, FOLLOW THESE STEPS:

-  1. Turn off the refrigerator by pressing the main power ON/OFF button.
2. Press and hold the TEMP. SET button while pressing the ON/OFF button. Release buttons when display comes on.
3. Press the TEMP. SET button to step through the 5 test options. The messages are displayed flashing - alternating between "TEST INDICATION" (e.g. F) and "TEST RESULT INDICATION" (e.g. E2).

NO	TEST FUNCTION	TEST INDICATION	TEST RESULT INDICATION
1	All outputs off. Display shows air temperature in fresh food compartment	F e.g. "41"	E2 Temperature sensor fault "Unfiltered temperature in F"
2	Turn LAC heater on	LH	ON LAC heater on Press the lamp switch. The lamp should still be on.
3	Turn AC heater on	AC	ON AC heater on " " AC heater is off. AC is not available.
4	D+ status (if D+ is connected) Alternator voltage	DP	ON D+ high " " D+ low
5	Run gas	LP	E1 Igniter and valve off. Gas hardware fault. ON Igniter and valve on. FL Igniter off and valve on. Flame detected " " Igniter and valve off. Gas problem. Check gas if flame is not ignited within 45 sec.