

## Removing the seat cushion complete and replacing foam or seat cover

### Tools needed:

3/8" socket with 3" extension self-tapping bolt

This repair can be completed in the RV, and time given to install new cover or foam is .60 or 36 minutes.

Rotate the backrest over as if you were going to make the sofa into the sleeping position. Then unplug the air bladder and fold it up onto the last section.



With the air bladder out of the way you can look down the inside of the arm toward the rear of the sofa and see the self tapping bolt head. Use a 3/8" socket with extension and remove the bolts on both sides.





When the bolts are removed, put the backrest in sofa position. Then slide the seat cushion back then lift seat cushion frame up and pull towards the front and out of the sofa.



If you are replacing the seat cushion cover, you just need to pull the “J” channel off the seat frame wire, and seat cover and foam will come completely off. Just unzip the cover and remove foam and install the foam back into the new cover. Then reinstall cover back over the seat frame; making sure to wrap the fabric on the outside of square tube seat frame.



Then reinstall the seat frame backrest onto the base frame. Make sure to interlock the seat frame with the base frame.

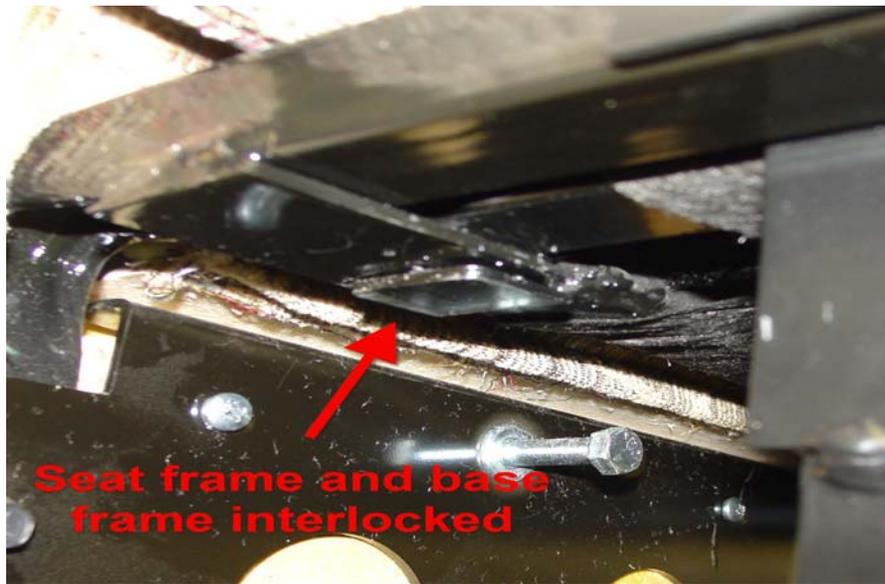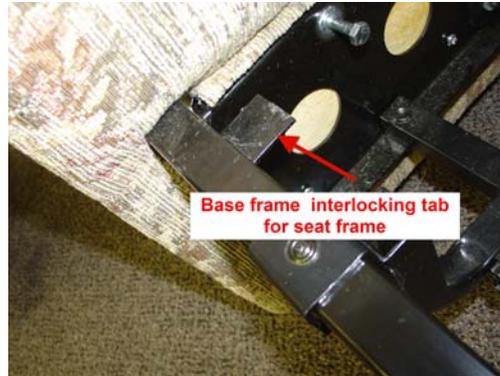

Then reinstall the self-tapping bolts into the seat frame, where you took them out. Roll the air bladder back over the seat cushion. Drape the air bladder motor below the seat cushion and plug the air bladder back in. Make sure there are no objects behind the sofa that could damage the air bladder. Fold the backrest; back up as if are making the bed back into a sofa.

If you have any questions or problems, please e-mail: [flairwarranty@flairinteriors.com](mailto:flairwarranty@flairinteriors.com) or [msteiner@flairinteriors.com](mailto:msteiner@flairinteriors.com) or call Flair Interior at 574-534-2163. Ask for the warranty department.