 [John-INSG](#)
Insignia Support



Posts: 4,703
Registered: 03-20-2009

Insignia TV Remote Control Codes – Official Thread

[Edited]

[Options](#)

Hello Insignia Enthusiasts!

Welcome to Community@Insignia!

We're very interested in making sure that you get the most out of your Insignia products, and that includes using your third-party universal remote controls. Many remote control codes can be found below. Also, your universal remote control should have a code search or learning feature that will help you find a working code.


Here is a listing of the most common Insignia TV codes for universal remote controls (for all Insignia TVs manufactured after January 1, 2007):

Universal remote control makes and models:

- **Bose** 10171, 11204, 11326, 11517, 11564, 11641, 12002
- **[General Electric \(GE\)](#)** 1181, 1180, 1175, 1171, 0103, 0189, 0217, 0135, 0133, 0116, 0167, 1148, 0456, 0029, 0905, 1406, 1407, 1408
- **[Innovage Products](#)** (Jumbo Universal Remote) 000, 001, 004, 009, 035, 038, 045
- **MasterControl** 350
- **[One for All](#)** 0054, 1204
- **Panasonic** 06, 07, 15, 18, 20, 0017, 0054, 0178, 0317, 0457, 1564, 0171, 1204, 1326, 1517, 1660, 2002, 2003, 2004
- **[Philips](#)** 0198, 0490 , 0115
- **Potenza ST** 0171, 1204, 1326, 1517, 1963, 2002
- **[RCA](#)** 135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
- **RadioShack** 038,173, 228, 238, 252, 253, 272, 290, 307, 325, 381, 417, 420, 477, 505, 511
- **Samsung** 00, 01, 02, 03, 04, 05, 06, 07, 08, 09, 15, 16, 17, 18, 40, 43, 46, 47, 48, 49, 59, 60, 98
- **Simplicity** 564, 575
- **[Sony](#)** 068, 069, 078, 096, 100, 164, 168, 229, 026, 00171, 01204, 01423, 01564, 02049, 10675, 12428, 12596, 00171, 01517, 01710, 01780, 01892, 02002, 02049, 20288, 02417

Set-top box makes and models:

- **[AT&T U-Verse](#)** 1004, 1005, 1023, 1061, 1034, 1035, 1040, 1273, 1398, 1465, 1507
- **[Bell Satellite TV](#)**
- **[Bell Fibe \(Canada\)](#)** Nova remote: 1423, 1564, 0463, 0171, 2751, 2432, 2184, 2088, 2049, 2002, 1963, 1892, 1810, 1785, 1660, 1641, 1517, 1385, 1326, 1204; Slim remote: 0010; MxV3 remote: 0029, 0061, 0103, 0116, 0133, 0135, 0167, 0189, 0217, 0456, 1148
- **[Buckeye CableSystem](#)** 1326, 2049
- **[Cablevision](#)** (Optimum Online) 068, 069, 078, 096, 100, 164, 168, 229, 026
- **[Charter](#)** 2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586

- [Comcast](#) 10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
-  [Cox](#) 1326, 1463
- [DirectTV](#) 10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
- [Dish Network](#) 834, 720, 222, 898, 365, 777, 754
- [Insight](#) 10171, 11204, 11963, 12002
- [Shaw](#) 0463, 1326, 1564, 1785
- [Time Warner](#) 400, 450, 461, 456, 10463, 1463, 0463
- [TiVo](#) 0091
- [Verizon](#) 0198, 0490
- [Vidéotron](#) 450

If you're still having trouble finding a code -- or your remote control is not listed above -- we want to help. Please reply to this message and we'll start working to get you an answer. Here's what we need you to provide so that we can get you what you need:

- The remote control manufacturer and model number.
- The model number of your TV.
- Any additional details about your situation that might help us help you.

We also ask that you remember that most universal remote controls don't offer all of the functionality of your original Insignia™ TV controller, but we'll do our best to make sure that you get the most out of your universal remote!

Regards,
John
Insignia™ Support