

Universal Remote Code

To operate this TV using the remote control provided by your Cable/Satellite provider, follow the programming instructions included with the providers' remote control and input the following codes when prompted:

- For Comcast or DirecTV remote controls, input the code- 10030.
- For AT&T (U-verse) remote controls, input the code- 1043.
- For RCA Universal Remote Controls, input the code- 0030.
- Remote Code: DISH 21.0 IR/UHF PRO(506).