


REAR PANEL

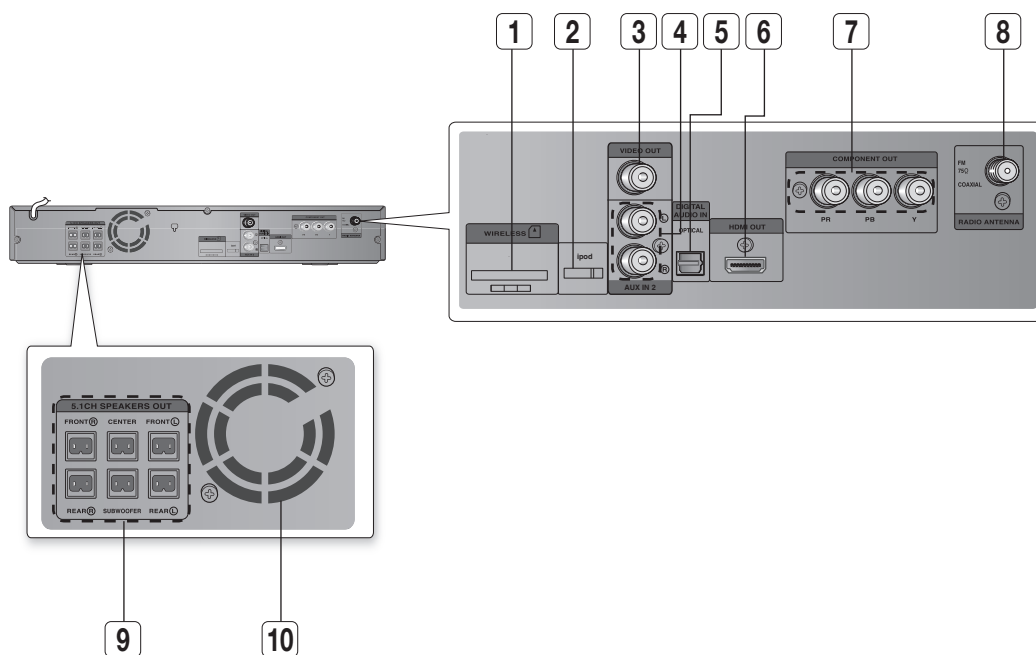

1	TX CARD CONNECTION (WIRELESS)	The TX card enables communication between the main unit and the optional wireless receiver amplifier.
2	iPod JACK	Connect the iPod dock connector here.
3	VIDEO OUTPUT JACK	Connect the TV's Video Input jack (VIDEO IN) to the VIDEO OUT jack.
4	AUX IN 2 JACKS	Connect to the 2CH analog output of an external device (such as a VCR)
5	External Digital Optical Input Jack	Use this to connect external equipment capable of digital output.
6	HDMI OUT JACK	Use the HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture.
7	COMPONENT VIDEO OUTPUT JACKS	Connect a TV with Component video inputs to these jacks.
8	FM 75Ω COAXIAL JACK	Connect the FM antenna.
9	SPEAKER OUTPUT CONNECTORS	Connect the front, center, rear speakers and subwoofer.
10	COOLING FAN	The fan always revolves when the power is on. Ensure a minimum of 4 inches of clear space on all sides of the fan when installing the product.