SONY

DVD Home Theatre System

Operating Instructions

4-259-831-12(1)

WARNING

unplugged.

sunshine, fire or the like

Indoor use only,

CAUTION

To reduce the risk of fire or electric shock

splashing, and do not place objects filled w

liquids, such as vases, on the apparatus.

To reduce the risk of fire, do not cover the

ventilation opening of the apparatus with

As the main plug is used to disconnect the

unit from the mains, connect the unit to an

an abnormality in the unit, disconnect the

main plug from the AC outlet immediately.

The main plug is used to disconnect this

device from the AC outlet, so position this

device in a location where it can be easily

Do not install the appliance in a confined

Do not expose batteries or apparatus with

battery-installed to excessive heat such as

The unit is not disconnected from the mains

as long as it is connected to the AC outlet,

even if the unit itself has been turned off.

To prevent injury, this apparatus must be

accordance with the installation instructions

securely attached to the floor/wall in

The use of optical instruments with this

product will increase eye hazard.

space, such as a bookcase or built-in cabinet.

easily accessible AC outlet. Should you notice

Do not place the naked flame sources such as

newspapers, tablecloths, curtains, etc.

lighted candles on the apparatus.

not expose this apparatus to dripping or

	For European and Mexican models:			
		This appliance		
, do		is classified as a		
vith	CLASS 1 LASER PRODUCT LUOKAN 1 LASERLAITE KLASS 1 LASERAPPARAT	CLASS 1 LASER product. This marking is located on the		
		rear exterior of		

unit Notice for customers: The following information is only applicable to equipment sold in countries applying EU Directives. The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

For the customers in the USA

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. **Owner's Record** The model and serial numbers are located on the rear exterior of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony

Model No. DAV-TZ130 Serial No.

NOTE:

2) Keep these instructions The following FCC statement applies only to Heed all warnings. Follow all instructions the version of this model manufactured for sale in the USA. Other versions may not 5) Do not use this apparatus near water. comply with FCC technical regulations. 6) Clean only with dry cloth.

Important Safety Instruction

manufacturer's instructions.

as radiators, heat registers, stoves, or

other apparatus (including amplifiers)

polarized or grounding-type plug. A

polarized plug has two blades with one

wider than the other. A grounding type

plug has two blades and a third grounding

prong. The wide blade or the third prong

are provided for your safety. If the

outlet, consult an electrician for

10) Protect the power cord from being

11) Only use attachments/accessories

specified by the manufacturer.

12) Use only with the cart, stand, tripod

bracket, or table specified by the

to avoid injury from tip-over.

3

provided plug does not fit into your

replacement of the obsolete outlet.

walked on or pinched particularly at

plugs, convenience receptacles, and the

point where they exit from the apparatus.

manufacturer, or sold with the apparatus.

When a cart is used, use caution when

moving the cart/apparatus combination

1) Read these instructions.

Do not block any ventilation openings. This equipment has been tested and found to Install in accordance with the comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. 8) Do not install near any heat sources such These limits are designed to provide reasonable protection against harmful that produce heat.9) Do not defeat the safety purpose of the interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (aerial). - Increase the separation between the

equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help. CAUTION You are cautioned that any changes or

Playable Types of Files

Extensions

modifications not expressly approved in this manual could void your authority to operate this equipment.

13) Unplug this apparatus during lightning storms or when unused for long periods of time. 14) Refer all servicing to qualified service

personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For the customers in Europe

Disposal of Old Electrical & Electronic Equipment (Applicable in the Europea Union and other European _ð countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessories: Remote Control

countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handing of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data

Disposal of waste batteries (applicable in the European

Union and other Europ

integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of -life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

©2010 Sony Corporation Printed in China

DAV-TZ130

Trademarks

This system incorporates with Dolby* Digital and Dolby Pro Logic adaptive matrix surround decoders. * Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D

symbol are trademarks of Dolby Laboratories. This system incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

"BRAVIA" is a trademark of Sony Corporation.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Windows Media is a registered trademark of Microsoft Corporation in the United States and/or other countries.

ABOUT MPEG-4 VISUAL: THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. 5

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA. LLC. SEE http://www.mpegla.com/

GB

For non-US models: ABOUT DIVX VIDEO: DivX* is a digital video format created by DivX, Inc. This is an

information and software tools to convert

video. Visit www.divx.com for more

your files into DivX video.

learn more about DivX VOD.

About these Operating

Instructions

DVD-RW/DVD-R

automatically.

official DivX Certified device that plays DivX

ABOUT DIVX VIDEO-ON-DEMAND: This

order to play DivX Video-on-Demand (VOD)

DivX Certified* device must be registered in

content. To generate the registration code,

locate the DivX VOD section in the device

setup menu. Go to vod.divx.com/ with this

code to complete the registration process and

DivX°, DivX Certified® and associated logos

are registered trademarks of DivX, Inc. and are used under license.

"DVD" may be used as a general term for a

When the system is in pause, stop, open, or

no disc mode, the system will enter standby

DVD VIDEO, DVD+RW/DVD+R, and

The system enters standby mode

mode automatically after 30 minutes.

the unit until they click.

A CD or DVD will not play if it has not been correctly finalized. For more information, refer to the operating instructions supplied with the recording device.

Playable Discs

 
DVD

CD

Discs that cannot be played

 Blu-ray Discs • HD DVDs DVD-RAMs DVD Audio discs • PHOTO CDs • Super Audio CDs • Data track of CD-Extras Audio material side on DualDiscs • DVD-R/DVD-RW/DVD+R/DVD+RW in VR (Video Recording) mode • CPRM (Content Protection for Recordable Media)-compatible DVD-R/RW containing

This product is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs



Note about double-layer DVDs The playback picture and sound may be momentarily interrupted when the layers

Your system has a region code printed on the rear of the unit and will only play a DVD VIDEO (playback only) labeled with an identical region code or Note about Multi Session CD You cannot play all sessions of a multisession

DVD-ROM

CD-ROM

VIDEO CD

Super VCD

CD-R/CD-RW

Note on playback operations of a DVD Some playback operations of a DVD may be intentionally restricted by software producers. Since this system plays a DVD according to designed, some playback features may not be available

switch.

Region code (DVD VIDEO only)

content flagged as "Copy once." Notes on discs


may not be compatible with this product.



dealer regarding this product.

2

disc

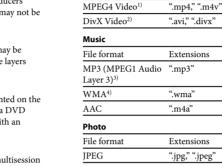

Video

File format

1) AVC is not compatible. 2) Unavailable on US models. 3) MP3PRO format is not compatible 4) WMA DRM, WMA Lossless or WMA PRO format are not compatible. Note Some files may not play depending on the

format, the encoding, or recording condition


• Some USB devices may not work with this system.

• The system supports ISO 9660 Level 1/ Level 2, or Joliet in DATA CD.

- The system supports UDF (Universal Disk Format) in DATA DVD.
- The system supports FAT12, FAT16, and
- FAT32 in USB device.
- The system can recognize the following files
- or folders in DATA DVD, DATA CD and
- USB device: - up to 300 folders - up to 648 files

• It may take time to read files in the following cases: - there are many folders or files. - the memory capacity of the USB device


Unpacking

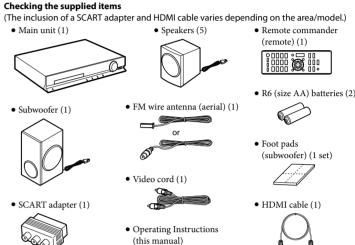

4

Preparing the remote control

 Insert two R6 (size AA) batteries (supplied) by matching the \oplus and Θ ends on the batteries to the markings inside the compartment



Connecting the Speakers

Caution Do not use any speakers other than those supplied with this system.

Connecting your TV Insert the connectors of the speaker cords to match the color of the SPEAKERS jacks of

Depending on the jacks on your TV or set-top box, select the video and audio connection

Tip

 For European models, connect the video cord (supplied) and an audio cord (not supplied) to the TV via the SCART adapter.

When Installing the Speakers on a Wall

2 Fasten the screws to the wall, then hang the speaker on the wall.

Caution


Depth of fastened screw

 


that you are using is very large.

are using is fragmented.


- the memory of the USB device that you

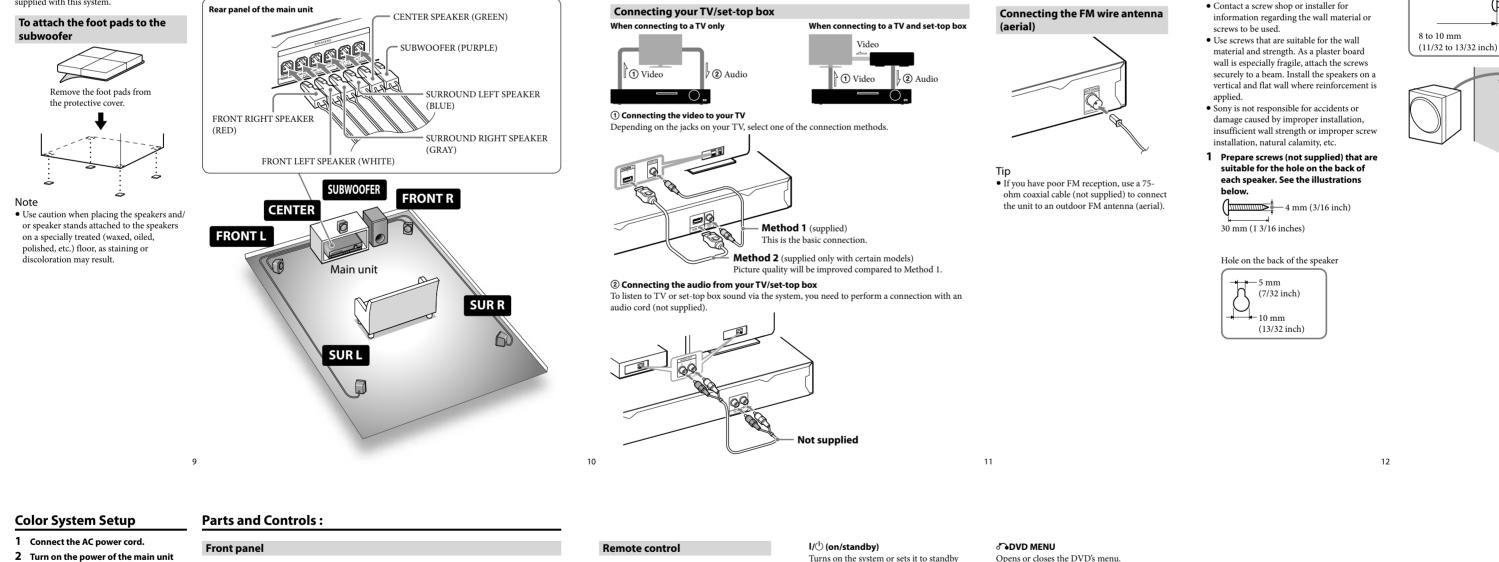




- 3 Press FUNCTION repeatedly or DVD/ CD to switch the function to DVD/CD. Playback starts automatically if a disc with an auto playback function is loaded. Press I twice to stop playback. 4 Switch the input selector on your TV
- to display "Home Theatre System." 5 Press SETUP in stop mode.
- The Setup Menu appears. 6 Press ←/→ repeatedly to select
- [Preference Page], then press 🕀. 7 Press ↑/↓ repeatedly to select [TV Type], then press (+)
- 8 Press ↑/↓ repeatedly to select [PAL] or [NTSC] from the displayed list, then press 🕂
- 9 Press SETUP to turn off the Setup Menu.
- Note
- interrupted momentarily after changing the color system as described above.

The display on the TV screen may be

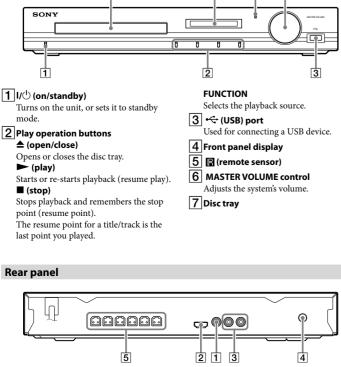

1 VIDEO OUT jack 4 ANTENNA (FM COAXIAL 75Ω) jack 2 HDMI OUT jack 5 SPEAKERS jacks **3** TV/CABLE (AUDIO IN L/R) jacks

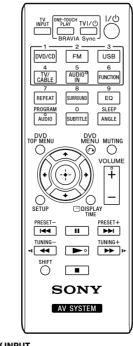

TV INPUT Switches the TV's input source between the TV signal and other input sources. BRAVIA Sync ONE-TOUCH PLAY Activates One-Touch Play TV I/🖰 (on/standby) Turns on the TV or sets it to standby mode.

14

Turns on the system or sets it to standby mode. Function selection buttons Select the playback source. DVD/CD FM

```
TV/CABLE
FUNCTION
```

USB

Selects the functions in sequence. REPEAT

Activates repeat/shuffle playback mode. SURROUND Selects surround audio output mode. EQ Selects EQ mode. AUDIO Selects the audio format/track and the FM mode. SUBTITLE Selects the subtitle language when multilingual subtitles are available. ANGLE Switches to other viewing angles when multiangles are recorded on a DVD VIDEO. Number buttons Enter the title/chapter numbers, preset radio stations, etc. PROGRAM Activates program play and presets radio stations SLEEP Sets the sleep timer. DVD TOP MENU

Opens the DVD's Top Menu.

Opens or closes the DVD's menu MUTING Turns off the sound temporarily. (↑/↓/→) Moves the highlight to a displayed item. (ENTER) Enters the selected item. VOLUME +/-Adjusts the volume SETUP Opens or closes the setup menu. DISPLAY Opens or closes the Display Menu. TIME Switches time information during playback. Playback operation buttons I (previous/next) ✓</>
→ (fast reverse/fast forward) <!!>
<!>I/I► (slow)
</!> Activates slow reverse/slow forward when pressed in pause mode. ► (plav) (pause) (stop) Radio operation button PRESET +/-TUNING +/-SHIFT Press and hold this button to use buttons with pink text labels.

Note AUDIO IN This button does not work.

15

13

Continued -----

16

Playing a Disc

 
1 Press DVD/CD. You can also select this function by pressing FUNCTION repeatedly.

2 Press ≜ to open the disc tray. 3 Place a disc on the tray, then press ▲.

With the label side up

5 Press VOLUME +/- to adjust the

4 Press ► to start playback.



Connect a USB device to the ⊷↔ (USB)

1 Press DVD/CD or USB.

Load the source.

For a disc

port.

DVD/CD: For a disc.

open/close the disc tray.

For a USB device

• USB: For a USB device.

3 Press \uparrow/\downarrow to select a folder, then press 🕀 and select a file.

4 Press ► to start playback. 5 Press VOLUME +/- to adjust the

Note

• Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the system off when connecting or removing the USB device.

Convenient Functions

About the Control for HDMI function ("BRAVIA" Sync)

You can control a TV compatible with the Control for HDMI function by connecting it disc to the system via an HDMI cable.

Available features One-Touch Play

With one touch of ONE-TOUCH PLAY on the remote control, the system and your TV automatically turn on and the TV's input is switched to the system. Playback starts automatically. System-Power Off When you turn the TV off by using the I/\bigcirc button on the TV's remote control or TV I/⁽¹⁾ on the system's remote control, the system turns off automatically. System Audio Control You can switch the audio output to either the TV speakers or this system's speakers via the TV's menu.

Sleep timer

You can set the system to turn off at a preset time, so you can fall asleep listening to music.

display (the remaining time) changes by 10 minutes. A countdown of the last 20 seconds until the

unit turns off appears in the front panel display.

seconds. The remaining time until the unit turns off appears in the front panel display.

To cancel the sleep timer function Press and hold SHIFT, then press SLEEP

17

repeatedly until "OFF" appears in the front panel display.

To view information about the

You can check the playing time and remaining time of the current title, chapter,

or track. Press and hold SHIFT, then press TIME repeatedly. Each time you press and hold SHIFT, then

press TIME while playing the disc, the displayed item changes depending on the

Press and hold SHIFT, then press SLEEP.

Each time you press this button, the minute

To check the remaining time

Press and hold SHIFT and SLEEP for 3

21

Precautions

On placement • At high volume, over long periods of time, the cabinet becomes hot to the touch. This

Playing Files on a Disc/USB Device

To change angles Press ANGLE during playback to select the desired angle.

You can also select the function by To display subtitles pressing FUNCTION repeatedly. Press SUBTITLE during playback to select

the desired subtitle language Place a disc on the tray by pressing \triangleq to To change the sound

When the system is playing a DVD VIDEO, DivX video file, or MPEG4 video file recorded in multiple audio formats (PCM,

Dolby Digital, or MPEG audio), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language

Other Playback Operations

With a VIDEO CD or CD, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers.

Press AUDIO repeatedly during playback to select the desired audio signal. The selected audio signal format is displayed

on the TV screen. To play a VIDEO CD with PBC

functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears. To play without using PBC

Press and hold SHIFT, then press the number buttons to select the item number you want in stop mode.

Using the Setup Display

Displayed items vary depending on the

The default setting is underlined.

The setup menu appears.

press → or (+).

Selected category

General Setup Page

[TV Display]

function

Press SETUP in stop mode.

nenu categories, then press 🤆

to the previously selected item.

5 Press SETUP to turn off the menu.

📥 💵 🖽 🗄 🖬 🗙

Selected setting Options

[16:9]: Select this when you connect a wide-

screen TV or a TV with a wide mode

3 Press ↑/↓ to select a setup item, then

Select the option you wish to change

and press 🕀 to confirm and go back

Setup categories

such as picture and sound.

country model.

track. 3 Press ←/↑/↓/→ to select [Start] to play the program. 18

> [4:3 Letter Box]: Displays a wide picture with black bands on the top and bottom

To search for a title/chapter/

1 Press T DISPLAY during play.

The Display Menu appears on the TV

2 Press ↑/↓ to select an option, then

3 Press and hold SHIFT, then press the

number buttons to jump to the

The selection display appears on the TV

number buttons to select the desired

The selection display appears on the TV

number buttons to select the desired

2 Press and hold SHIFT, then press the

To play in programmed order

The Program Menu display appears on

2 Press and hold SHIFT, then press the

number buttons to select the desired

Selects the tracks to play in the order you

1 Press and hold SHIFT, then press

2 Press and hold SHIFT, then press the

When playing an MP3/JPEG/DivX file

1 Press ⁽¹⁾ DISPLAY during play.

1 Press 💬 DISPLAY during play.

track/scene.etc.

press (+).

desired option

When playing a CD

track.

screen.

 
number.

want (only for CDs).

PROGRAM.

the TV screen.

When playing a DVD/VCD



[4:3 Pan Scan]: Displays a full-height picture on the entire screen, with trimmed sides. 2 Press ←/→ to select one of the setup



[OSD Lang] (On-Screen Display) You can switch the display language on the TV screen.

[Control for HDMI]

This function is available when you connect the system and a TV that is compatible with the Control for HDMI function via an HDMI

cable [On]: You can operate mutually between components that are connected via an HDMI

[Off]: Off.

cable.

[HDMI Audio] This setting is only required if you are using the HDMI OUT jack for an audio

connection [Off]: Turns off HDMI audio output. You can still enjoy sound output via the speaker

[All]: The HDMI audio output format will be same as the audio stream being played. If the playback audio format is not supported, the audio output will be changed to PCM automatically.

[PCM]: HDMI audio output will be downmixed to linear PCM (2-channel).

Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should

any problem persist, consult your nearest

Note that if service personnel changes some

parts during repair, these parts may be

To play repeatedly/shuffle, etc.

Press REPEAT repeatedly to select the desired playback mode. The selected mode appears in the front panel display. "REP CHP": Repeats the current chapter. • "REP TT": Repeats the current title. "REP ALL": Repeats all titles.

• "REP OFF": The system returns to normal playback mode. • "SHUFFLE": Plays the contents once in random order until all the contents have been played. • "SHUF REP": Repeats shuffle play.

• "REP TRA": Repeats the current track.

• "FOLDER": Plays the current folder. • "RANDOM": Plays all files in random order • "SINGLE": Plays the current file.

• "REP FLD": Repeats the current folder. Note

depending on the disc or file.

• The selectable modes and their order differ

• "REP ONE": Repeats the current file.

To select a surround setting Press SURROUND repeatedly during

playback to select a surround audio output mode. The selected mode appears in the front panel display

• "MULTI" (A.F.D. MULTI): When the source is 2 channel, sound is output from all speakers. • "STANDARD" (A.F.D. STANDARD): The system discriminates the sound format of the source and presents sound as it was

recorded/encoded • "DOLBY PL" (PRO LOGIC): Performs Dolby Pro Logic decoding • "2CH ST" (2CH STEREO): All formats are

downmixed to 2 channels. Note

19

• Depending on the playback stream, the surround settings may not be effective.

[RS]: Adjusts the sound level of right

parameter from -6.0 dB to +6.0 dB.

from -6.0 dB to +6.0 dB.

listening position to speakers.

from 1.0 m to 7.0 m (3 to 23 ft).

R channel ($\{L/R-5 ft\}$ to L/R).

[Center Speaker]

[Sur. Speaker]

[Test Tone]

Level

Tip

23

[C]: Adjusts the distance of the center

dB to +6.0 dB.

[Distance]

surround speaker. It is possible to adjust the

[LS]: Adjusts the sound level of left surround

speaker. It is possible to adjust the parameter

[SW]: Adjusts the sound level of subwoofer. It

is possible to adjust the parameter from -6.0

If you move one of the speakers, be sure to

set the parameters of the distance from the

[L/R]: Adjusts the distance of the left/right

speakers. It is possible to adjust the parameter

speaker. It is possible to adjust the parameter

from (A) 1.6 m shorter than the setting of the

L/R channel to (B) the same setting of the L/

[Ls/Rs]: Adjusts the distance of the left/right

surround speaker. It is possible to adjust the

parameter from (A) 5.0 m shorter than the

setting of the L/R channel to (B) the same

[On]: Activates the center speaker

[Off]: Deactivates the center speaker.

[On]: Activates the surround speakers.

[On]: The speakers emit the test tone.

[Off]: Deactivates the surround speakers.

The speakers will emit a test tone to set the

[Off]: The speakers do not emit the test tone

• To adjust the volume of all speakers, turn

VOLUME +/- on the remote control.

A DATA CD/DATA DVD cannot be played.

• The DATA CD is not recorded in ISO

• The DATA DVD is not recorded in UDF

9660 Level 1/Level 2, or Joliet.

A JPEG image file cannot be played.

A DivX video file cannot be played.

(width) \times 576 (height).

• The DivX video file is larger than 720

• It is larger than 2.048 (width) \times 1.536

(height) in normal mode, or more than

2,000,000 pixels in progressive format

which is mainly used on Internet Web

(Universal Disk Format).

sites.

MASTER VOLUME on the unit or press

setting of the L/R channel ({L/R-16 ft} to L/

[Screen Saver] [On]: The screen saver image appears if you do not operate the system for about 15

minute [Off]: Off. [Last Memory]

This system recalls the point where you stopped the disc the last time it was played

and resumes playback from that point the next time you insert the same disc. [On]: The system stores the resume points in

memory. [Off]: The system does not store the resume points in memory. Playback restarts at the resume point only for the current disc in the unit.

Note • When the resume playback memory is full, the resume playback point for the earliest

disc is deleted. [Auto Standby]

[On]: Enters standby mode automatically when in stop, pause, no disc, or eject mode for more than 30 minutes. [Off]: The unit does not enter standby mode automatically.

Speaker Setup Page

[Level] You can adjust the sound level of all the speakers and the subwoofer. [L]: Adjusts the sound level of left speaker. It s possible to adjust the parameter from -6.0 dB to +0.0 dB. [C]: Adjusts the sound level of center speaker. It is possible to adjust the parameter from -6.0 dB to +6.0 dB. [R]: Adjusts the sound level of right speaker. It is possible to adjust the parameter from -6.0 dB to +0.0 dB.

Selecting the Sound Effect

To select an equalizer setting

Press EQ repeatedly during playback until

• "FLAT": Flat and pure sound mode.

• "JAZZ": Clear mid and high range.

great sounding movie effects and

music and watching dramas.

rock/pop music.

display

the desired mode appears on the front panel

• "CLASSIC": Ideal for listening to classical

music and watching live concert DVDs.

Recreates the atmosphere of a live club with

the artist just in front of you. Good for jazz

• "ROCK": Enhanced low and high range for

atmosphere. Great for action movies and

Using a Tuner

1 Press FM.

found.

PROGRAM.

frequency.

1 Press FM.

Press AUDIO.

number.

To preset radio stations

tune in any of those stations simply by

You can preset 20 FM stations. You can then

selecting the corresponding preset number

2 Press and hold TUNING +/- for 2

the desired radio station.

seconds to start tuning until you find

"SEARCH +" or "SEARCH -" appears in

station with sufficient signal strength is

"P 01" flashes in the front panel display.

4 Press and hold SHIFT, then press the

number buttons to select a preset

To select a preset radio station

You can also select a preset number by

2 Press PRESET +/- to select a preset

pressing and holding SHIFT, then

If an FM program is noisy, you can select

• Press $\leftarrow / \uparrow / \lor / \Rightarrow$ repeatedly to select the

Video Setup Page

[HDMI Resolution]

speaker and the desired level or distance.

You can select the type of video signal that is

[Auto]: The system outputs the optimal video

[480p/576p]: The system outputs $720 \times 480p^{\circ}$

[720p]: The system outputs $1280 \times 720p^3$

[1080i]: The system outputs 1920 × 1080i*

[1080p]: The system outputs $1920 \times 1080p^*$

 $[\rightarrow]$: Displays the DivX^{*} registration code.

• Enter this unit's DivX registration code

divx.com/. DivX videos rented or

when you rent or purchase video from vod.

purchased through the DivX® VOD (Video

On Demand) service can be played only on

The TV type default setting varies depending

the device to which they are registered.

output from the HDMI OUT jack.

signal for the connected TV.

or 720 × 576p* video signals

* i: interlace, p: progressive

For non-US models:

Preference Page

[PAL]: For a PAL-system TV.

[NTSC]: For an NTSC-system TV

DVDs with multiple sound tracks.

Selects the preferred audio language for

[TV Type]

on the area.

[Audio]

video signals.

video signals.

video signals.

[DivX VOD]

Tip

monaural reception. There will be no stereo

20

[Subtitle]

[Disc Menu]

[Parental]

with different scenes

password.

[Default]

[Password]

the password

section

2

24

menu.

You can switch the language of the subtitles

You can switch the language for a disc's

You can restrict playback of DVDs that have

ratings. Scenes may be blocked or replaced

1 Press ↑/↓ to select a rating level from

2 Press and hold SHIFT, then press the

This feature enables you to reset all the setup

menu options and your personal settings to

for the [Password] and [Parental] items.

Press (+) to confirm the default reset.

Password Setup Page

[Old Password] section

4 Press [OK] to exit the menu.

the factory defaults, except for your password

The default password is "000000." To change

1 Press and hold SHIFT, then press the

number buttons to enter "000000" or

your last set 6-digit password in the

Press and hold SHIFT, then press the

digit password in the [New Password]

number buttons to enter a new 6-

3 Press and hold SHIFT, then press the

number buttons to enter the new 6-

digit password again in the [Confirm

PWD] section to confirm your entry.

number buttons to enter your 6-digit

1 to 8 or [Off], then press $\overline{\oplus}$.

recorded on a DVD VIDEO.

pressing the number buttons.

effect, but reception will improve.

"STEREO": Stereo reception.

"MONO": Monaural reception.

the front panel display until a radio

3 Press and hold SHIFT, then press

5 Press 🕀 to store the station

is not a malfunction. However, touch the cabinet should be avoided. Do not place the system in a confined space where ventilation is poor as this may cause overheating.

• Do not install the system near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock. • Do not install the system in an inclined

position. It is designed to be operated in a horizontal position only. • Do not place heavy objects on the system.

On operation

• If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.

• If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further. On cleaning

• Clean the cabinet, panel, and controls with

a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent

such as alcohol or benzine. If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

25

Specifications

AUDIO POWER SPECIFIC for the U.S. models POWER OUTPUT AND T HARMONIC DISTORTIO (FTC) Front L + Front R Wit both fron rate chai RM mon har fron rate **Amplifier Section** POWER OUTPUT (rated) Front L + Front R 32 \ ohn TH POWER OUTPUT (referen Fro Sur R: 4 cha kHz Cen cha kHz Sub 6 oł Pin

Inputs

TV/CABLE :

	CD/DVD System			
CATIONS	Laser Diode Properti	es Emission Duration:		
CATIONS		Continuous		
TOTAL		Laser Output*: Less		
ON:		than 1,000 μW		
		value measurement at a		
th 3 ohms loads,	distance of 200 mm from the objective lens			
th channels driven,		ical Pick-up Block with		
m 180 - 15,000 Hz;	7 mm aperture.			
ed 23 watts per annel minimum	USB Section			
4S power, with no	• (USB) port:			
ore than 1% total	Maximum current:	500 mA		
rmonic distortion	Tuner Section			
m 250 milli watts to	System	PLL quartz-locked		
ed output.	T	digital synthesizer		
-	Tuning range North American and Brazilian models:			
l):	North American and	87.5 MHz - 108.0 MHz		
W + 32 W (at 3		(100 kHz step)		
ms, 1 kHz, 1%	Other models:	87.5 MHz - 108.0 MHz		
ID)		(50 kHz step)		
ence):	Antenna (aerial) terminals			
ont L/Front R/		75 ohms, unbalanced		
rround L/Surround	Intermediate frequency			
43 watts (per annel at 3 ohms, 1		10.7 MHz		
(z)	Video Section			
nter: 89 watts (per	Outputs	VIDEO: Pin jack		
annel at 6 ohms, 1		HDMI OUT: HDMI		
(z)		19-pin		
owoofer: 89 watts (at	Speakers			
hms, 100 Hz)	Front			
	SS-TS107			
1 jack	Dimensions (approx.) 91 mm \times 112 mm \times			
		101 mm (3 $^{5}/{\rm s}$ in \times		
		$4^{1/2}$ in × 4 in) (w/h/d)		
		incl. projecting parts		
	Mass (approx.)	0.4 kg (15 oz)		

IMPORTANT NOTICE Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video mage or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

On moving the system

On cleaning discs, disc/lens cleaners

· Do not use cleaning discs or disc/lens

These may cause the apparatus to

malfunction

On your TV's color

cleaners (including wet or spray types).

Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).

On handling discs

• To keep the disc clean, handle the disc by its edge. Do not touch the surface. • Do not stick paper or tape on the disc. • Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.

On cleaning discs

• Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. • Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

On heat radiation Due to the slim type of main unit design, you may feel some heat on the top of the unit. This is normal. Please consult your nearest Sony dealer if you have any questions.

This system can only play back a standard

circular discs (e.g., card, heart, or star shape)

circular disc. Using neither standard nor

Do not use a disc that has a commercially

available accessory attached, such as a label

may cause a malfunction.

or ring.

retained Power

Sonv dealer.

22

The power is not turned on.

· Check that the AC power cord (mains lead) is connected securely.

Picture

There is no picture. • The video connecting cords are not connected securely. • The unit is not connected to the correct TV input jack. • The system is not selected via the video input of the TV.

• Check the output method on your system. Even though you set the aspect ratio in

[TV Display] of [General Setup Page], the picture does not fill the TV screen. The aspect ratio on the disc is fixed.

Color irregularity occurs on the TV

screen. The system's speakers contain magnet parts, so magnetic distortion may occur. When color irregularity occurs on the TV screen, check the following items. Install the speakers at least 0.3 meters (1.0 ft) from your TV set.

The [TV Type] setting does not match your TV. [TV Type] can be reset according to the following procedure: 1. Press \triangleq to take out the disc. 2. Press 🗂 DISPLAY. 3. Press (+) [TV Type] will be reset.

• If the color irregularity persists, turn off

the TV set once, then turn it on after 15

Reposition the speakers farther away

Sound

to 30 minutes.

from your TV set.

The name of a folder or file is not There is no sound. Severe hum or noise is displayed correctly. heard The speaker cords are not connected securely. • Clean the disc. The sound loses stereo effect when you play a VIDEO CD or CD. Set the audio setting to [Stereo] by pressing AUDIO. Operation Radio stations cannot be tuned in. • Check that the antenna (aerial) is connected securely. Adjust the antenna (aerial) or connect an external antenna

(aerial) if necessary. A disc does not play.

• The region code on the DVD does not match the system. • Moisture has condensed inside the unit and may cause damage to the lenses. Remove the disc and leave the unit turned on for about half an hour

• The system can only display numbers and letters of the alphabet. Other characters are displayed as []. A disc does not start playing from the

beginning. • Resume Play has been selected.

During stop, press \blacksquare and then start playback. • Program play has been selected. During stop, press and then start playback. • Shuffle play has been selected. During

stop, press \blacksquare and then start playback A disc cannot be ejected and "LOCKED" appears in the front panel display. · Contact your Sony dealer or local authorized Sony service facility.

The system does not work normally. • Disconnect the AC power cord (mains

lead) from the wall outlet (mains), then reconnect after several minutes.

The Control for HDMI function does not work.

• Set the [Control for HDMI] setting in [General Setup Page] to [On].

27

31

28

to the operating instructions supplied with the component.

USB device

HDMI] function.

"OVERLOAD" appears in the front panel display.

 Remove the USB device from the • (USB) port. Make sure there is no problem with the USB device.

• Make sure that the connected component

• Check the connected component's setting

for the Control for HDMI function. Refer

is compatible with the [Control for

The USB device (audio file/JPEG image

file) cannot be played. • Files that are encrypted or protected by passwords, etc., cannot be played. • There is no playable file in the USB device.

Center		Dimensions (approx.) 360 mm × 56 mm ×				
SS-CT102			$342 \text{ mm} (14 \ ^{1}/_{4} \text{ in} \times 2 \ ^{1}/_{4} \text{ in} \times 13 \ ^{1}/_{2} \text{ in}) (w/$			
Dimensions (approx.) 91 mm × 112 mm ×		h/d incl. projecting			
	$101 \text{ mm} (3 \frac{5}{8} \text{ in } \times 10^{-5} \text{ mm})$		parts			
	$4^{1/2}$ in × 4 in) (w/h/d)	Mass (approx.)	2.6 kg (5 lb 12 oz)			
	incl. projecting parts	indoo (uppronii)	210 kg (0 10 12 02)			
Mass (approx.)	0.5 kg (1 lb 2 oz)	Design and specifications are subject to				
Surround		change without notice.				
SS-TS107		·				
Dimensions (approx.) 91 mm × 112 mm ×					
	101 mm (3 ⁵ / ₈ in ×					
	$4 \frac{1}{2} \text{ in } \times 4 \text{ in} \text{ (w/h/d)}$					
	incl. projecting parts					
Mass (approx.)	0.4 kg (15 oz)					
Subwoofer						
SS-WS103						
Dimensions (approx.) 190 mm $ imes$ 345 mm $ imes$					
	225 mm (7 $^{1}/_{2}$ in \times					
	13 ⁵ / ₈ in × 8 ⁷ / ₈ in)					
	(w/h/d) incl. projecting					
	parts					
Mass (approx.)	3.5 kg (7 lb 12 oz)					
General						
Power requirements						
North American and	Mexican models:					
	120 V AC, 60 Hz					
Argentine models:	220 V - 240 V AC,					
	50/60 Hz					
Brazilian models:	127 V - 240 V AC,					
T .: A	50/60 Hz					
Latin American mod						
	110 V - 240 V AC, 50/60 Hz					
Other models:	220 V - 240 V AC,					
Other models.	50/60 Hz					
Power consumption						
roner consumption	Standby: <1 W*					
* Valid when the system is in the following						
status:						
 – [Control for HD] 	MI] is set to [Off].					
-						

30

26

32

29