


<u>Lippert Components</u>, Inc. <u>Informational Publication</u>

LIP Sheet - 0176 revP

TOUCH AUDIO WEATHER ALARM - DISABLE INSTRUCTIONS

- 1. Turn the radio on.
- 2. Press MODE button to select NOAA channel.

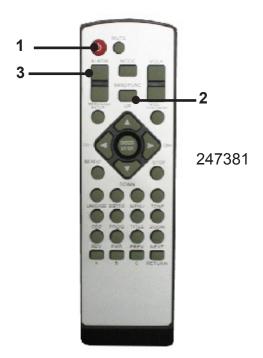

- 3. Press the Alarm Button on the remote and watch the display; (there is a little speaker/horn icon).
- 4. Press Alarm Button once to turn alarm on and once more to turn alarm off.