 


## PATIO SCREEN INSTALLATION AND ADJUSTMENT INSTRUCTIONS


### PLEASE READ THESE INSTRUCTIONS COMPLETELY

- (1) Thoroughly clean the sill track and head frame channel of your Patio Door where the screen will ride.
- (2) Position the screen so that the handle lock is facing towards the inside of the Patio Door.
- (3) Lift the screen up into the door frame's head channel. Swing the bottom of the screen over top of and down onto the sill roller track. If your door is equipped with a vinyl type bug seal, trimming may be necessary to achieve a proper fit.
- (4) Try operating the screen. If binding occurs or the screen does not operate smoothly, move the screen to the point where it binds and adjust the rollers at the bottom and/or top as described in the roller adjustment label (located near the handle). Keep enough tension on the bottom rollers so that they roll on the sill track when operating the screen.

**NOTE: SILL ROLLER TRACK CAN BE LUBRICATED WITH SILICONE LUBRICANT.  
DO NOT USE OIL BASED LUBRICANTS FOR TRACK.**

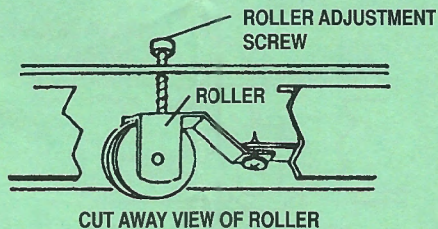

## PATIO SCREEN HANDLE STRIKE INSTALLATION INSTRUCTIONS

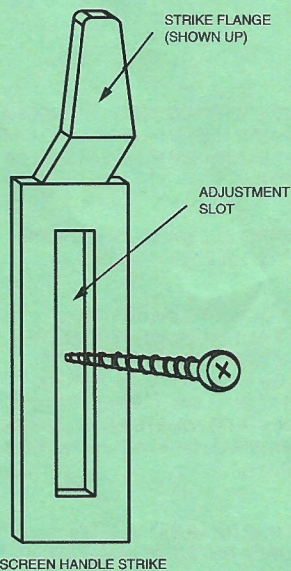

1. POSITION THE STRIKE FLANGE EXTENDING UP, SO THAT WHEN THE SCREEN IS LOCKED, THE LATCH LEVER IS IN THE DOWNWARD POSITION.
2. CLOSE THE SCREEN INTO THE FRAME AND MARK THE POSITION TO INSTALL THE STRIKE.
3. IF HOLES ARE PRE-DRILLED, INSTALL THE STRIKE USING THE SUPPLIED SCREWS. IF NO HOLES EXIST, DRILL 1/16" HOLES AND INSTALL THE STRIKE USING THE SUPPLIED SCREWS. (NOTE: USE THE ADJUSTMENT SLOT IN THE STRIKE TO MOVE IT UP OR DOWN BEFORE TIGHTENING THE SCREWS.)

**ALWAYS ADJUST THE STRIKE SO THAT POSITIVE LATCHING OCCURS BEFORE TIGHTENING THE SCREWS.**