

## Zero Point Calibration

The "Zero Point" is the programmed point that the trailer will return to each time the Auto Level feature is used. The "Zero Point" must be programmed prior to using the Auto Level feature to ensure the proper operation of the system. The "Zero Point" feature is only available on the OneControl™ Touch Panel with this system.

**NOTE:** Prior to starting this procedure, double check all connections on the controller, jacks, and touch panel.

**NOTE:** When calibrating Zero Point, the user has full manual control over the jacks. See "Basic Jack Operation - Manual Mode" to adjust to the desired level position. Press the enter button to set.

### To Set the Zero Point

**NOTE:** The following procedure works from Standard Mode only. (See "Standard Mode and Menu" to reach standard mode.)

1. Press the "CONNECTED" icon (Fig. 5A) at the top of the leveling screen quickly 6 times. Wait a few seconds until the gear icon with "OPTIONS" appears (Fig. 6A).
2. Press the gear icon with "OPTIONS" (Fig. 6A).
3. The screen will show "SET UP: Zero Mode Press Enter" (Fig.7).
4. Press the "Enter button" (Fig. 7A).
5. The touch pad will present options for further leveling of the trailer if needed. The screen will also state "ZERO POINT CALIBRATION - Press Enter to Set" (Fig. 8).
6. Press "ENTER" (FIG. 8A).
7. Screen will show "Zero Point Stability Check ... Please Wait" (Fig. 9), followed by "Zero Point Set" (Fig. 10).

