


On power up

Level Status
READY = ready to level
LEVEL = auto level completed
NOT LEVEL = auto level completed, but unit has been moved from level position




Press to cycle through MAIN MENU items. These include available modes of operation, as well as system status screens.


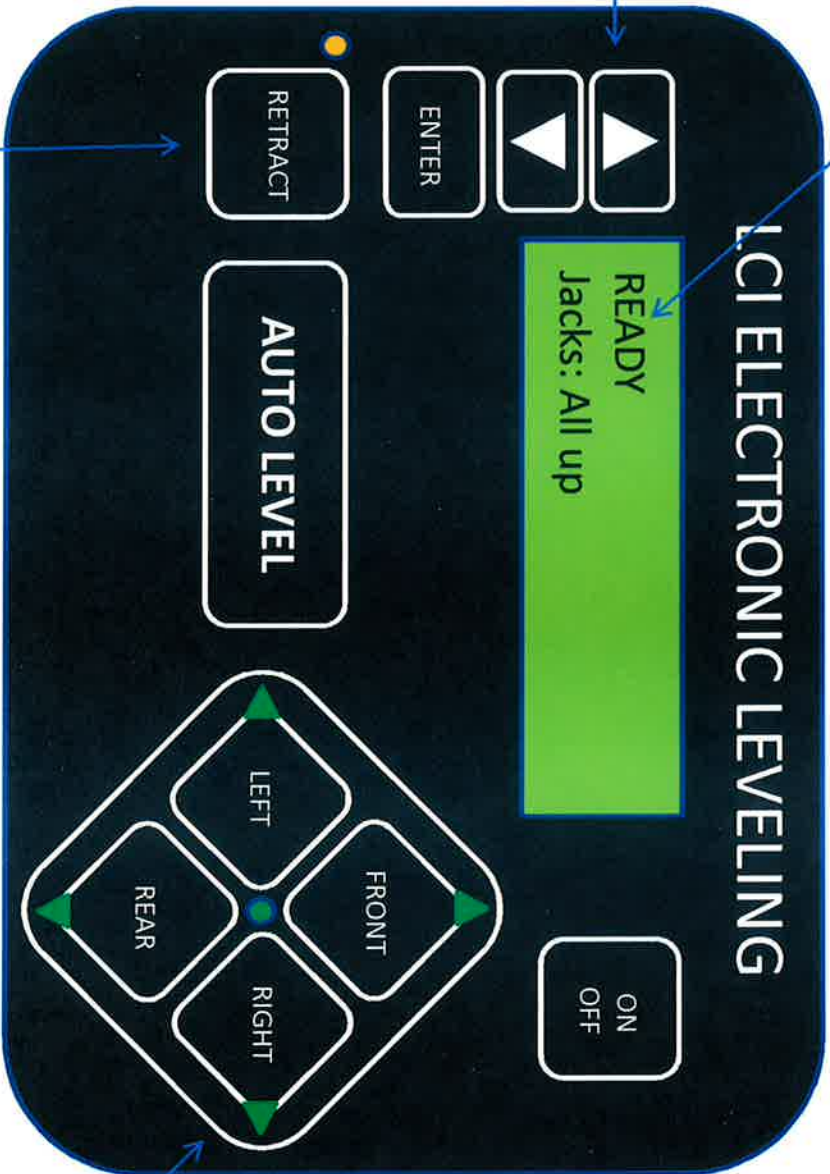


Press to latch retract mode. When light is ON, retract is active. When light is OFF extend is active


LEDs indicate level axis

Cycle through main menu options using the  keys

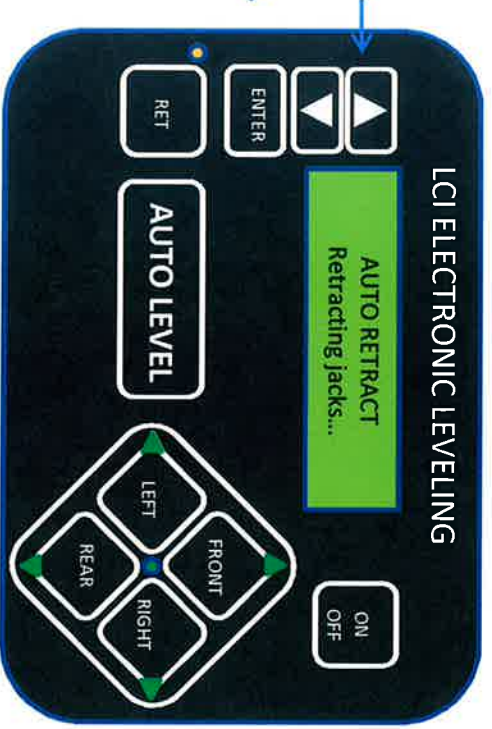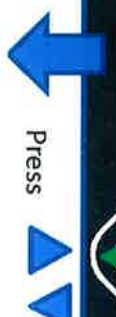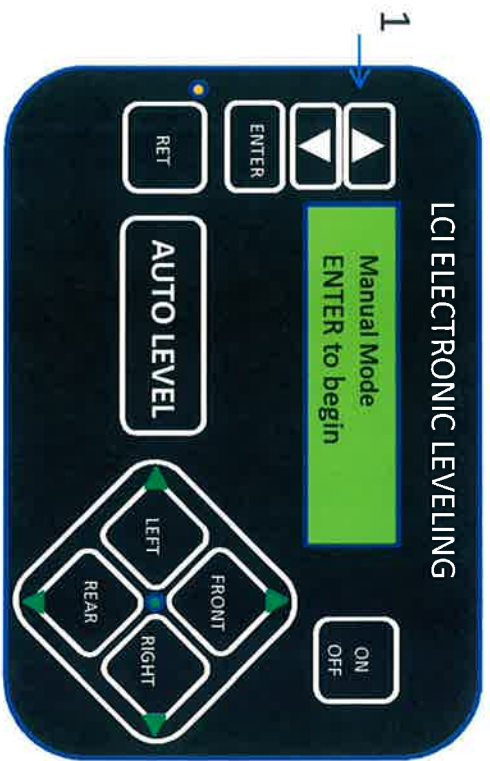

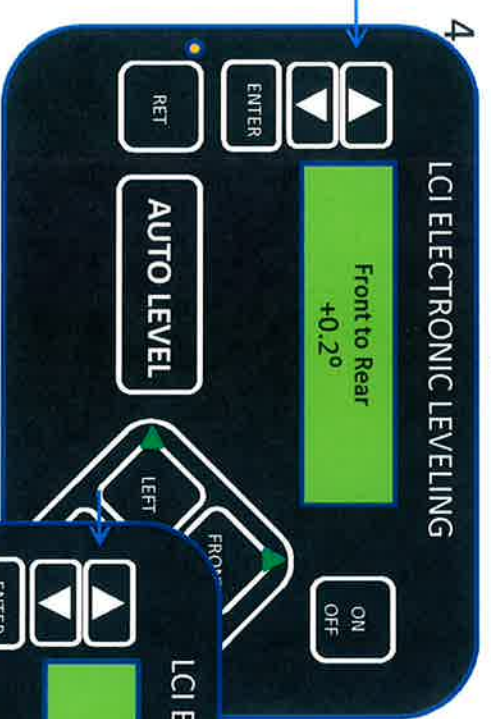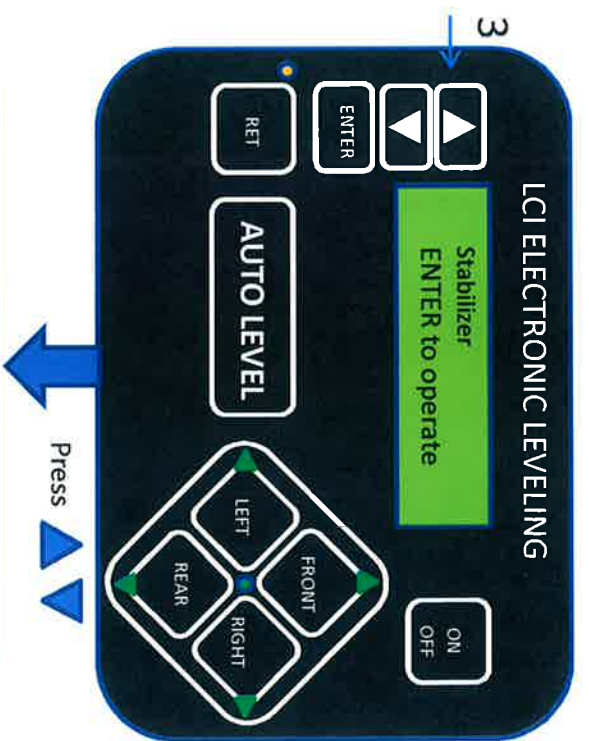

Last 3 menu items
display system status

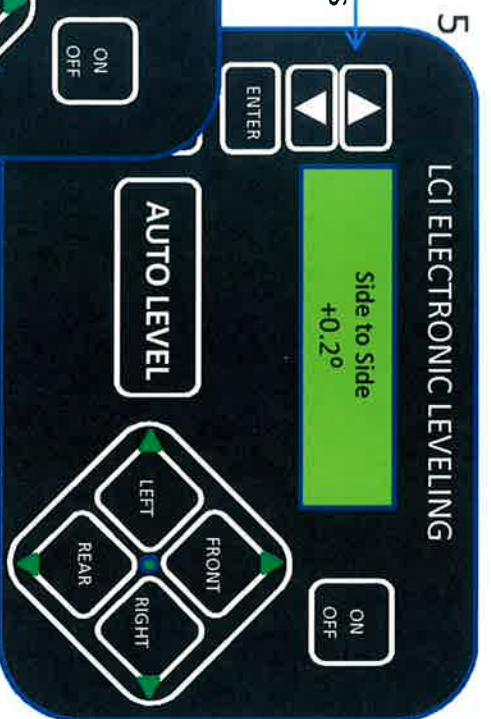

GENERAL RULES AND OPERATION

- Units will be shipped from IDS in “ZERO MODE”
 - LCD will indicate zeroing instructions
- To return to the main menu after entering one of the functions (manual mode, stabilizer) press the **V** or **Δ** button and it will take you back to the main screen (1st screen with level and pressure switch status)
- Error modes, auto modes, zero mode will prompt the user with additional instructions and information.
- Auto Level can be activated from the main menu at any time by pressing the “AUTO” button
- ANY manual extend/retract function is latched according the retract LED. If the LED is on, pressing the front/right/rear/left buttons will cause the respective jacks to retract. If the led is off, the jacks will extend. To toggle the retract state, simply press the “RET” button.
- Units can be placed back into zero mode by completing the following sequence
 - Turn Panel off
 - Press “FRONT” 10 times
 - Press “Rear” 10 times