MANUAL OPERATION, HYDRAULIC

1. Front jacks

NOTE: The front jacks will operate manually any time system is "ON" except "AUTO MODE."







- 1) Push "ON/OFF" to turn system on.
- 2) Push "UP" ARROW once or until screen reads "MANUAL MODE."
- 3) Push "ENTER" once while screen reads "MANUAL MODE."
- 4) Push "FRONT" to extend front landing gear legs.
- 5) Push "RETRACT" and orange LED, Fig. 6, comes on.
- 6) Push "FRONT" to retract front landing gear legs:
- **NOTE:** If orange LED is on legs will retract If orange LED is off legs will extend
- Push "ON/OFF" to turn system off.
- 8) After 3 minutes system will turn off by itself.

2. Level-Up jacks - EXTEND

- a. Turn "ON/OFF" button "ON."
- b. Push scroll arrow to display "MANUAL MODE," see Fig. 4
- c. Push "ENTER," see Fig. 4. "MANUAL MODE" displayed, Fig. 5

Level-Up jacks - RETRACT

- e. To retract, push "RETRACT" (orange LED lights up), see Fig. 6
- f. Push "REAR" to retract all Level-Up jacks.
- g. To extend, the "RETRACT" light should be "OFF."
- NOTE: By pushing "RIGHT," both passenger side Level-Up jacks operate; pushing "LEFT," both driver's side Level-Up jacks operate and so on.

NOTE: The side to side movement in manual mode is limited to 5° of tilt.

ZERO SETTING THE CONTROL

- 1. Turn "ON/OFF" button "OFF"
- 2. Push "FRONT" button 10 times,
- 3. Push "REAR" button 10 times
- 4. Control will flash and beep, LCD says "ZERO POINT CALIBRATE"
- 5. To memorize this level condition, press "ENTER"
- 6. LCD says "ZERO POINT STABILITY SUCCESSFULLY SET"
- 7. The control will then turn off.
- 8. Turn "ON/OFF" on to commence operation.

REPLACEMENT COMPONENTS

195860 - LEVEL-UP JACK

- 177094 CARTRIDGE VALVE
- 176954 SPADE COIL
- 194712 4-WAY MANIFOLD
- 241314 TOUCH PAD HARNESS
- 241318 9 PIN HARNESS
- 241317 CONTROLLER TO SATELLITE HARNESS
- 234802 TOUCH PAD
- 232201 SATELLITE LEVEL SENSOR
- 241129 LEVEL-UP CONTROLLER
- 142927 PSI SWITCH
- 118246 TROMBETTA MOTOR SOLENOID
- 138421 RED RESTRICTED FLOW BLOCK

