

Installing the air mattress bladder

NO TOOLS NEEDED

Time given to change the air bladder is .20 or 12 minutes

Replacement of air bladder can be done in the RV

Grasp the top of the backrest near the center and pull towards you, causing the backrest to rotate over, and then gently set it in the down position. Next, lift the folding legs into position, making sure they are fully extended; then, rotate the last section to the floor.



Remove the air mattress from the bag making sure to also retrieve the small repair kit from bag. Unfold the air mattress, laying the mattress out; the motor should be in the back right corner with the tan, flocked side up.





Now, you will line up the loop Velcro straps on the air mattress bag with the hook Velcro straps on the metal frame. Start in the center where there are two sets of Velcro straps. When matching up the Velcro, put the upper straps on first (1,2,3,4), then the lower straps (5,6,7,8). Make sure the air mattress nylon is taunt between upper and lower metal framework.



Lift the section to a vertical position for ease of putting the Velcro on the metal frame.



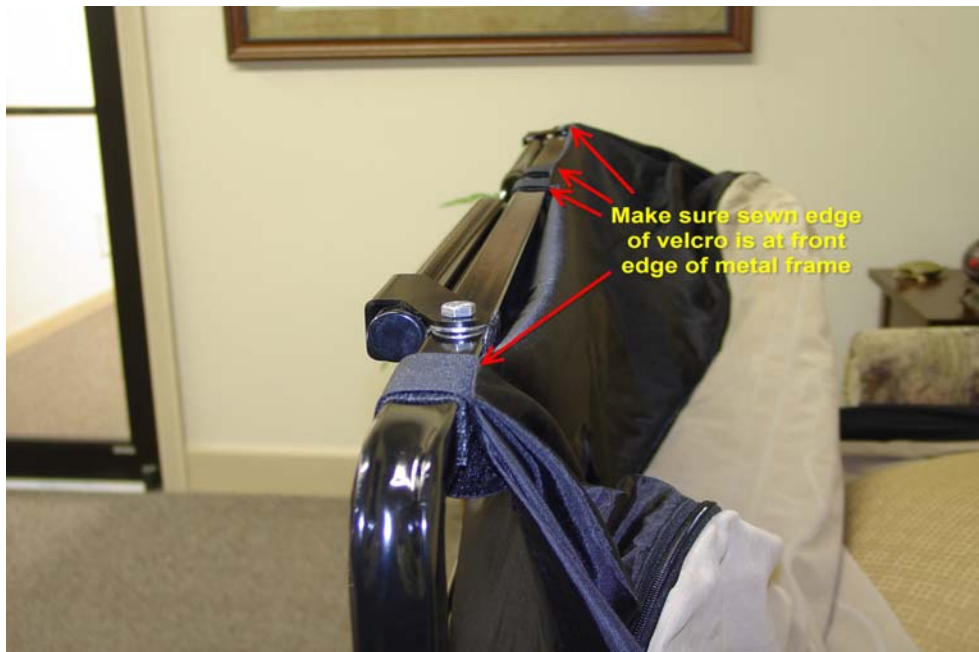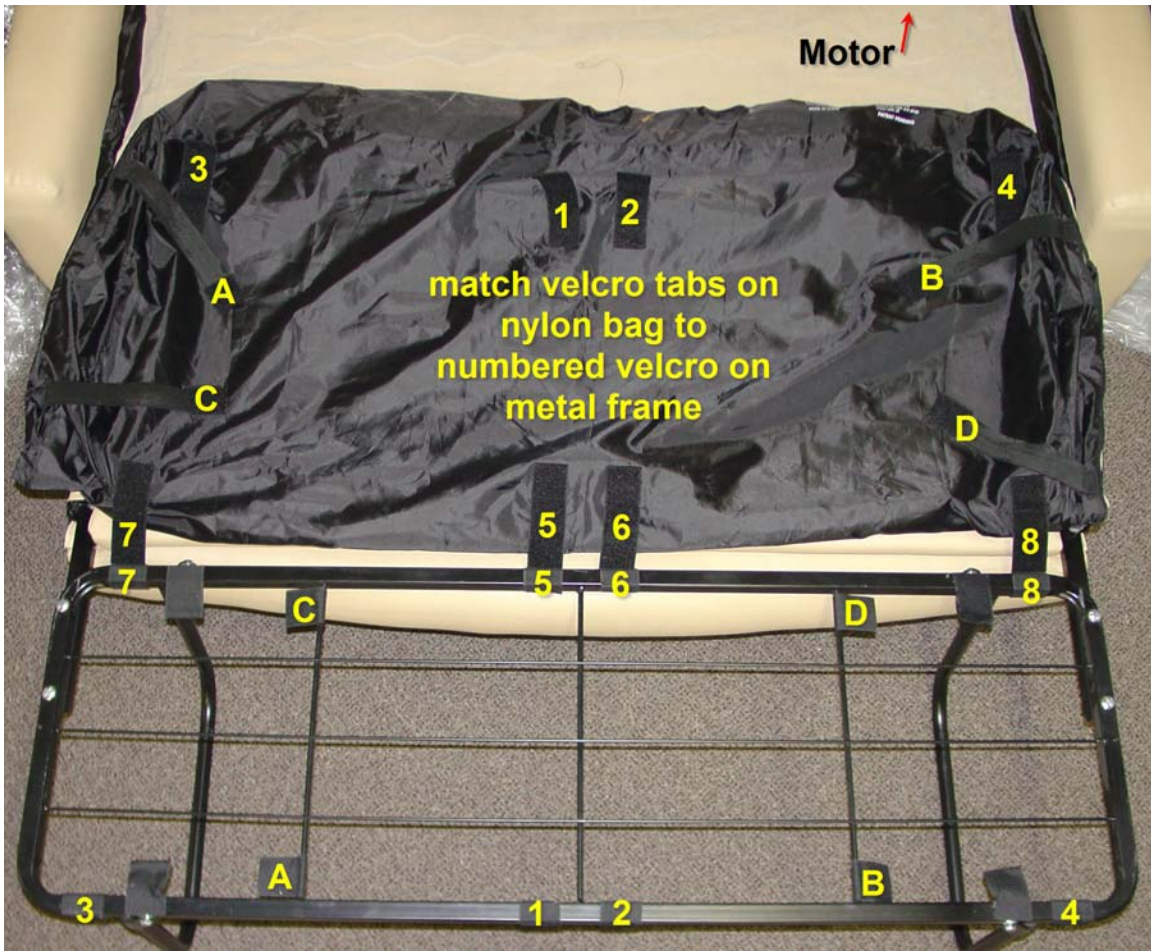

When installing the Velcro that is on the elastic, make sure you do NOT go around the outside of the metal frame. Note: Do not use the hook Velcro that is behind the bolt & nut. It is there to shield the nylon bag from the bolt. (see below)



Then, plug the air mattress into an outlet and inflate, then deflate one time. To inflate the airbed, you will need to remove the cover cap. **(Please note: if the cover cap is not removed and the motor is turned on, it may cause the motor to overheat and may cause a motor failure. This is NOT a warrantable issue).** After removing the cover cap, make sure the arrow is pointed to inflate mode and turn the switch on. **(Please note: The motor will not automatically turn off. Leaving the motor running after the mattress is filled may cause the motor to overheat and may cause a motor failure. This is NOT a warrantable issue.)** The airbed should inflate in less than 2 minutes.



To deflate the airbed, just turn the dial to the deflate position and turn the on switch. There is also a manual deflate port at the foot end of the mattress. Just unscrew the cover and put your finger inside the hole to flip the flap up into the inside of the airbed. If you are deflating the airbed using the manual port, you will need to close the manual port when the airbed is empty; and if not completely deflated, finish by using the motor.

(Please note: The motor will not automatically turn off. Leaving the motor running after the mattress is deflated may cause the motor to overheat and may cause a motor failure. This is NOT a warrantable issue.) When the airbed is completely deflated, fold the bed back into sofa position. **(Please note: make sure all objects are clear from hinge points when rotating the backrest into the storage position. Also, make certain all the air is out. If not, either of these conditions may cause the mechanism to not close completely or the air mattress may then hit the wall when it is being closed.)**



If you have any questions or problems, please e-mail flairwarranty@flairinteriors.com or msteiner@flairinteriors.com or call Flair Interior at 574-534-2163. Ask for the warranty department.