Fan-Tastic Vent Model 4000, Model 4000BT



# How to Use Your Genuine FAN-TASTIC VENT®

Ceiling Fan

This fan is not rain sensor equipped



# Operating Instructions:

- Open dome approximately 3 inches or more by turning the hand crank (Fan-Tastic Vent has a built in safety switch that will not allow motor to operate unless dome is partially open.)
- 2. Turn 3-speed knob to desired performance level (0-Off, I-Low, 2-Medium, 3-High).
- 3. Slightly open a window of your choosing. The choice of window will determine how the air is going to flow through the cabin. Maximum airflow will be achieved through one slightly open window only.
- 4. BT Models are equipped with a built-in thermostat. ON is 22°F (deep blue), OFF is 123°F (bright red). Select a setting somewhere in between for your comfort. Fan blade will automatically turn on and off as your coach heats up and cools down. If fan blade rapid cycles on/off, select a more extreme temperature setting to minimize.



**Recommendations:** You may use your Fan-Tastic Vent while driving or in windy conditions. In this case keep your dome fully open. When storing your Motorhome, lower your dome until it is completely closed and turn the 3 speed knob to 0-Off.

NOTE: At 1/3 dome open, exhaust efficiency is reduced to 90%.

**NOTE:** Fan-Tastic Vent does not recommend placing a vent cover over, or using a foam filter on your Fan-Tastic Vent. This greatly restricts airflow, causing accumulation of dust and increased sound levels.

Fan-Tastic Vent Model 4000,
Model 4000BT

# How to Clean the Screen on Your Genuine FAN-TASTIC VENT®

Ceiling Fan



### Cleaning Instructions:

- Turn fan motor off.
- 2 Locate the thumb tab on the Pop 'N Lock Screen, grab and pull down to unsnap.
- Wash Pop 'N Lock Screen and fan blade with a light non-abrasive soap, rinse and dry.
- Re-install the Pop 'N Lock Screen by gently snapping back in place.

**Suggestion:** Once screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.



### Cleaning Instructions:

- Turn fan motor off.
- 2 Remove 8 painted flat head Phillips screws around perimeter of screen insert.
- 3 Clean screen and blade with soap and water solution and reinstall.
- Re-Install the scree by reversing Step 2.

**Suggestion:** Once screen and blade are washed and dried, you may wipe or spray 303 protectant (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.

## Troubleshooting:

Fan-Tastic Vent wishes to assist any customer with any problem or need. Please call I-800-521-0298 for assistance between 8 am and 5 pm E.S.T.

Fan-Tastic Vent Corp. 2083 S. Almont Avenue Imlay City, MI 48444 Tel: (810) 724-3818 Toll Free: 800-521-0298

www.fantasticvent.com

FAN-TASTIC VENT®

