

## LEVELING AND STABILIZATION

1. Locate the blocking valves on the jacks to be operated (See Fig. 1).
2. Using a 5/32" Allen wrench, manually open the valve by turning the manual override set screw in the end of the valve clockwise (See Fig. 2).
3. Remove protective label (See Fig. 3).
4. Use a standard hex bit, inserted into a cordless drill or power drill.
5. Insert hex bit into coupler found under the protective label (See Fig. 3 & 4).
6. Run drill forward or clockwise to extend jacks and in reverse or counterclockwise to retract jacks. (See Fig. 4).
7. Be sure to turn the manual override set screw back to the counterclockwise position after extending or retracting landing gear (See Fig. 5).

Fig. 1



Fig. 2

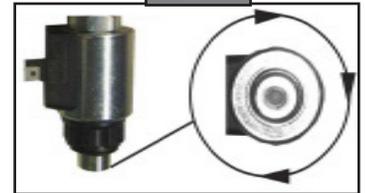


Fig. 3

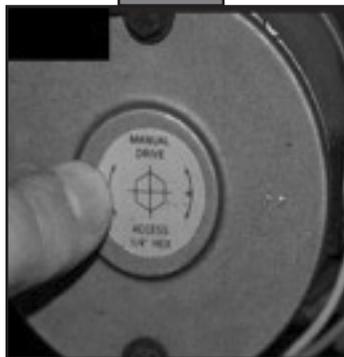


Fig. 4



Fig. 5

