

**Removing the backrest cushion complete from sofa and replacing backrest foam or backrest cover.**

**Tools needed:**

None

This repair can be completed in the RV, and time given to install foam is .30 or 18 minutes or installing a new backrest cover will take .40 or 24 minutes.

Rotate the backrest over as if you were going to make the sofa into the sleeping position. Then unplug the air bladder and fold it up onto the last section.



To install new foam into the backrest, you will want to separate the backrest from the seat base. To separate them, you will pull the release clip that is under the fabric. Then pull the backrest away from the base structure.




When the backrest separated from the base rotate the backrest onto the last section you expose the zippers to remove the foam out of the backrest. If you are replacing the backrest cover, do not rotate the backrest up.



## Replacing the backrest cover

With the air bladder still on the last section you will see a material covering the backside of the backrest. It is secured by Velcro, pull it loose and you will see the backrest springs. To remove the cover you will pull the “J” channel off the back wire around the perimeter and the cover will fall off the metal structure.

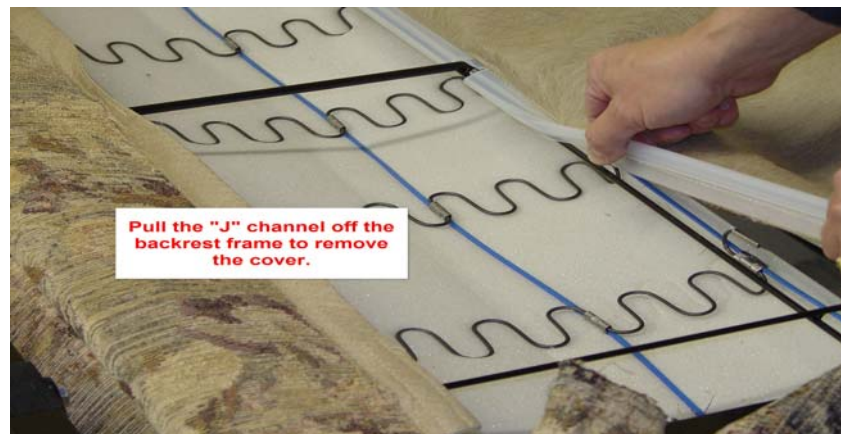

Once the cover is removed from the structure remove the pillows from the backrest and install them into the new cover. Then you will reinstall the “J” channel back around the perimeter of the structure. After cover is installed roll the air bladder off the last section, back over the seat cushion and drape the air bladder motor below the seat cushion and plug the air bladder back in. Make sure there are no objects behind the sofa that could damage the air bladder. Fold the backrest back up as if are making back into a sofa.

If you have any questions or problems, please e-mail: [flairwarranty@flairinteriors.com](mailto:flairwarranty@flairinteriors.com) or [msteiner@flairinteriors.com](mailto:msteiner@flairinteriors.com) or call Flair Interior at 574-534-2163. Ask for the warranty department.